


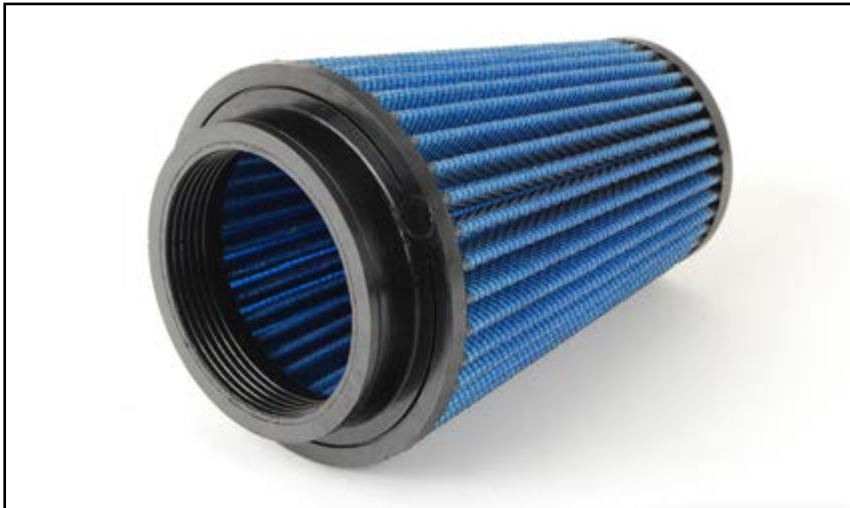


Oiled And Non-Oiled Reusable Air Filter Cleaning



Proper service and repair procedures are vital to the safe, reliable operation of all motor vehicles as well as the personal safety of those performing the repairs. Standard safety procedures and precautions (including use of safety goggles and proper tools and equipment) should be followed at all times to eliminate the possibility of personal injury or improper service which could damage the vehicle or compromise its safety.

INTRODUCTION

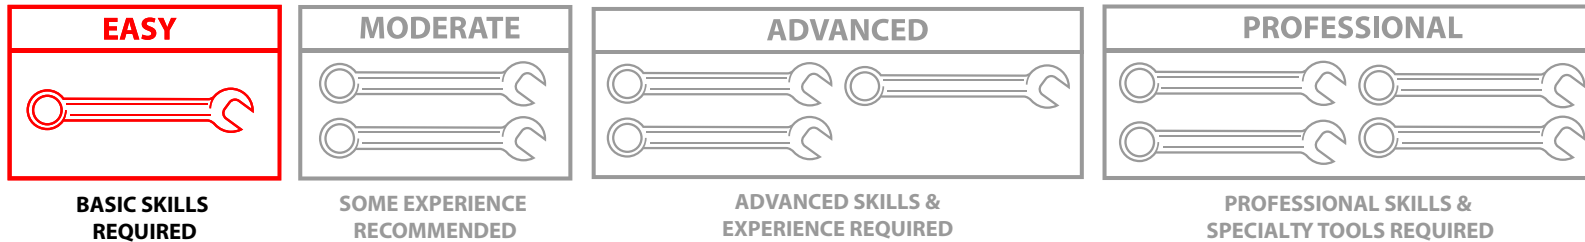

Cleaning your air filter is a very simple job which can be easily completed in an afternoon, and only requires basic skills. Before you begin, familiarize yourself with these instructions and make sure you have all of the required tools to remove your air filter. These instructions will explain in detail how to clean (and oil if applicable) your reusable air filter element. These instructions do not apply to most factory installed air filters, and should only be followed on reusable air filters.


 These instructions do not include the air filter removal process from your vehicle, remove your filter before beginning with step one.

TABLE OF CONTENTS

Required Tools and Equipment	pg.3
Shop Supplies and Materials.....	pg.3
Installation Notes	pg.4
Preparation and Safety	pg.4
Oiled Type Filter Element.....	pg.5
Non-Oiled Type Filter Element	pg.8

REQUIRED TOOLS

We recommend that you have a basic selection of tools necessary for automotive repair. We have not listed specific tools to remove your air filter element, as this will vary from vehicle to vehicle.

- Air Filter Element Cleaning Kit (If Applicable)
- Soft Bristle Brush
- Soft Scrub Brush

SHOP SUPPLIES AND MATERIALS

- Hand Cleaner/Degreaser..... Available at ecstuning.com..... [ES#2167336](#)
- Shop Rags Available at your local auto parts store
- Utility Sink Filled With Soapy Water

INSTALLATION NOTES

- RH refers to the passenger side of the vehicle.
- LH refers to the driver side of the vehicle.
- Always use the proper torque specifications.
- If applicable to this installation, torque specifications will be listed throughout the document and at the end as well.
- Please read all of these instructions and familiarize yourself with the complete process before you begin.

GENERAL PREPARATION AND SAFETY INFORMATION

ECS Tuning cares about your health and safety. Please read the following safety information. This information pertains to automotive service in general, and while it may not pertain to every job you do, please remember and share these important safety tips.

- Park your car in a safe, well lit, level area.
- Shut the engine off and remove the key from the ignition switch.
- Make sure any remote start devices are properly disabled.
- Always wear safety glasses.
- Make sure the parking brake is applied until the vehicle is safely lifted and supported.
- If using an automotive lift, be sure and utilize the factory specified lift points. Lifting a vehicle in an incorrect location can cause damage to the suspension/running gear.
- When lifting a vehicle using a jack, always utilize the factory specified lift points. Lifting a vehicle in an incorrect location can cause damage to the suspension/running gear. Always support the vehicle with jack stands.
- Always read and follow all safety information and warnings for the equipment you are using.



Never get underneath a vehicle that is supported only by a jack. Always make sure that the vehicle is securely supported on jack stands.

OILED TYPE FILTER ELEMENT

Step 1:

Apply cleaner to both sides (inside and outside) of the filter element, and let the cleaner soak into the filter for 10 minutes. Do not allow the cleaner to dry on the air filter.

NOTE

The majority of oiled type filter elements are pleated like the one we are using for these instructions. If you have an oiled filter that is not pleated, the cleaning procedure will be the same, only the oiling procedure will differ.

Step 2:

Rinse with cool, low-pressure water from the clean side of the filter, this will ensure that dirt is lifted and removed on the dirty side. The cleaner will appear milky-white while rinsing, be sure to rinse until all traces of cleaner are gone.



OILED TYPE FILTER ELEMENT

Step 3:

Clean and rinse the filter again if necessary. Ensure that all traces of cleaner are gone. If you see traces of cleaner as shown in this photo, it needs to be rinsed again.



Step 4:

Allow the filter to dry completely, do not apply heat or blow dry with compressed air.



OILED TYPE FILTER ELEMENT

Step 5:

Apply a light coat of oil to the crown of each pleat as shown in the photo, allowing the oil to evenly soak into the element. Many oils are colored like the one shown to ensure even coverage on the element.

NOTE

If you have an oiled filter that is not pleated, apply the oil evenly to the entire surface of the filter, allow to soak for 10-15 minutes, and gently blot away any excess oil.



Step 6:

Allow the oil to soak into the filter for 15-20 minutes. Touch up as necessary for a uniform application. Your air filter is now ready to install on the vehicle.

TECH TIP

A properly oiled filter will have even coverage on the entire filter, without any runs or drips. Do not over oil the filter element as this can cause a loss of performance, and possible damage to the Mass Air Flow Sensor(s).



NON-OILED TYPE FILTER ELEMENT

Step 1: Soft Bristle Brush

Using a soft bristle brush, gently brush away excess dirt and dust. Use light pressure while brushing so the filter does not tear.

NOTE

We are using a non-pleated filter for this demonstration. If you have a non-oiled filter that is pleated, the cleaning procedure will be the same.



Step 2:

Wash the filter with soapy water, a sink is generally the best place to accomplish this. Work the soap in by hand and massage the dirt out of the filter.



NON-OILED TYPE FILTER ELEMENT

Step 3: Soft Scrub Brush

A soft scrub brush can be used for hard-to-remove dirt and debris, be sure to use appropriate pressure to keep from damaging the filter.



Step 4:

Rinse with warm, low-pressure water from the clean side of the filter, this will ensure that dirt is lifted and removed from the dirty side.



NON-OILED TYPE FILTER ELEMENT

Step 5:

Gently shake off any excess water and allow the filter to dry naturally, do not apply heat.



Step 6:

Your air filter is now ready to install on the vehicle.



Your air filter cleaning is complete!



These instructions are provided as a courtesy by ECS Tuning.

Proper service and repair procedures are vital to the safe, reliable operation of all motor vehicles as well as the personal safety of those performing the repairs. Standard safety procedures and precautions (including use of safety goggles and proper tools and equipment) should be followed at all times to eliminate the possibility of personal injury or improper service which could damage the vehicle or compromise its safety.

Although this material has been prepared with the intent to provide reliable information, no warranty (express or implied) is made as to its accuracy or completeness. Neither is any liability assumed for loss or damage resulting from reliance on this material. SPECIFICALLY, NO WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR ANY OTHER WARRANTY IS MADE OR TO BE IMPLIED WITH RESPECT TO THIS MATERIAL. In no event will ECS Tuning, Incorporated or its affiliates be liable for any damages, direct or indirect, consequential or compensatory, arising out of the use of this material.