



Schwaben Professional Spring Compressor Tool

ES2093755

The Schwaben spring compressor is designed for use only on MacPherson struts springs in passenger cars. Do not use it on heavy duty vehicle springs that exceed its capacity.

Before Each Use


Inspect the entire spring compressor for signs of damage. Lubricate the threaded screw inside the jack housing. Do not use the compressor if any defects are detected until worn or damaged parts have been replaced.

Components

The Schwaben Professional Spring Compressor comes with two sets of jaws for large and small diameter spring coils.

Affix the jaws to the clamping head using the set screws included in the kit.

Rotating the large hex on the jack screw raises or lowers the movable jaw to compress or release tension on the spring.

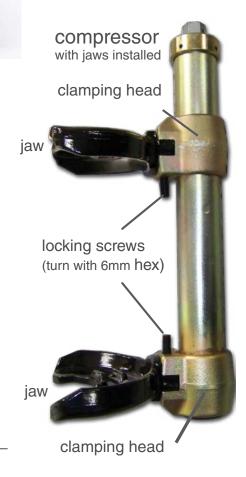

This instruction sheet is provided as a courtesy by ECS Tuning.

Proper service and repair procedures are vital to the safe, reliable operation of all motor vehicles as well as the personal safety of those performing the repairs. Standard safety procedures and precautions (including use of safety goggles and proper tools and equipment) should be followed at all times to eliminate the possibility of personal injury or improper service which could damage the vehicle or compromise its safety.

Although this material has been prepared with the intent to provide reliable information, no warranty (express or implied) is made as to its accuracy or completeness. Neither is any liability assumed for loss or damage resulting from reliance on this material. SPECIFICALLY, NO WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR ANY OTHER WARRANTY IS MADE OR TO BE IMPLIED WITH RESPECT TO THIS MATERIAL. In no event will ECS Tuning, Incorporated or its affiliates be liable for any damages, direct or indirect, consequential or compensatory, arising out of the use of this material.

Page - 1

Phone: 1.800.924.5172



Schwaben Professional Spring Compressor Tool ES2093755

Cautions:

Keep the centerlines of the spring compressor jackscrew and workpiece parallel at all times Never allow the workpiece to shift, placing its centerline at an angle to the centerline of the tool.

