



Radiator Pressure Tester Kit

014710SCH01A

1. Safety Information

- Hot coolant can cause severe burns.
- Allow the engine to cool completely before using this tool.
- Always wear safety glasses.

2. Operating Instructions

- Remove the radiator cap after the engine has been allowed to cool.
- Use the table on the next page to select the appropriate adapter, then screw the adapter onto the radiator opening until it is snug. **(Fig. 1)**
- Connect the pump to the adapter with the quick disconnect coupler on the end of the pump hose. **(Fig.2)**
- Use the hand pump to increase system pressure until the gauge shows 10-15 psi. If the gauge needle drops this indicates a leak somewhere in the system. Begin by checking that the adapter is snug and the hose coupler is secured, if all connections are OK then closely inspect the cooling system for the source of the leak.
- Release pressure from the system by pushing the button located on the hose coupler. Clean any fluid or dirt out of the tool and store it in the case.

Fig. 1

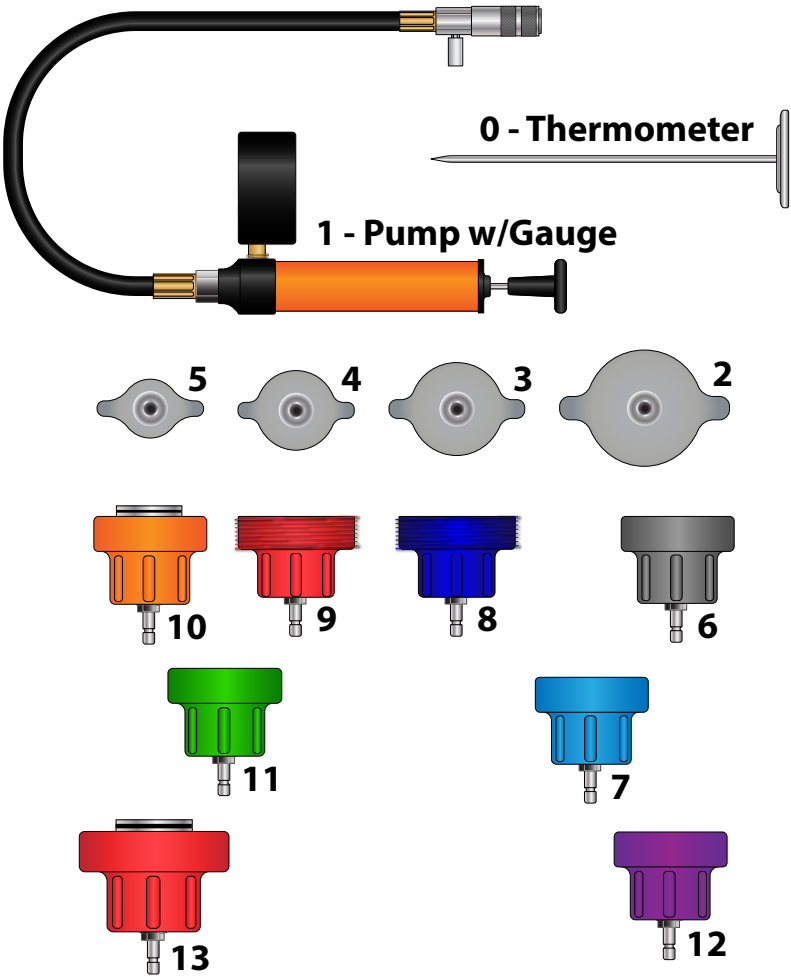


Fig. 2



3. Adapter & Component Identification

Components are oriented just as they appear inside the storage case.



No.	Make(s)	Model(s)
2	GM	Cadillac
3	Buick Chrysler Chevrolet Dodge Jeep Mercedes-Benz Oldsmobile Pontiac	LeSabre (90-), Park Avenue (91-) Sebring (95-) Venture (97-) Caravan (89-), Dakota (89-), Stratus (95-) W123, W124, W126, W201 Silhouette (90-) Bonneville (90-), Grand Prix (-03)

No.	Make(s)	Model(s)
4	Acura Chevrolet Chrysler Dodge Eagle Ford Geo GM Honda Hyundai Infiniti Isuzu Kia Lexus Mazda Mercedes-Benz Mercury Mitsubishi Nissan Subaru Suzuki Toyota	Integra (90-93) Nova (85-98), Spectrum (85-88), Sprint (85-88) Laser (91-98) Colt (84-92), Stealth (91-96) Talon (91-98) Escort (91-), Explorer (95-01), Festiva (88-93), Probe (89-97), Ranger (87-), Tempo (92-94), Thunderbird (89-97), Windstar (95-) Metro (89-94), Prizm, Tracker (89-93) Nova, Spectrum, Sprint Accord (90-93), Civic (88-91), Passport (94-), Prelude (90-98) All (87-) All (92-) All (92-97) Sedona (03-) ES (94-99), LS 400 (90-99), LX 450 (96-99), LX 470 (96-99) All (85-99) - EXCEPT Protege w/1.5L (95) & MPV (90-) Cougar (89-92), Cougar (93-97 w/V6), Topaz (92-94), Tracer (91-99), Villager (93-99) 3000GT (91-98), Diamante (92-95), Galant (85-93), Mirage (85-92), Montero (89-98), Starion (89-93) All (87-) All (84-) All (83-95 w/16mm deep neck) 4Runner (86-95), Avalon (95-), Camry (83-91, 94-99 w/4 cyl.), Celica (82-89), Cressidina (85-92), Corolla (83-92), Land Cruiser (87-), Supra (86-92 non turbo), Previa (89-97), Sienna (98-99), Solara (98-), Starlet (83-84), Pickup (83-92), Tacoma (95-), Tercel (83-90), T100 (95-98)
5	Acura Chrysler Dodge Eagle Geo GM Honda Isuzu Lexus	CL (97-), Integra (94-99), Legend (91-96), MDX (01-), TL (95-) Colt (93-94) Summit (93-95) Metro (95-98), Prizm, Tracker (94-98) Metro (95-98), Prizm, Tracker (94-98) Accord (94-), Civic (91-), Odyssey (95-), Pilot (03-) All (98-) GS 400 (98-99), ES 250 (90-91), ES 300 (92-93), GS 300 (93-99)

No.	Make(s)	Model(s)
5	Mazda Mitsubishi Suzuki Toyota	Protege (95 w/1.5L) Diamante (96-), Galant (94-), Mirage (93-), Montero Sport (97-) All (89-99 w/9mm deep neck), XL-7 (01-) Camry (90-91 V6 w/auto trans, 92-), Celica (90-98), Corolla (93-), Echo (00-), Paseo (92-97), RAV4 (96-), Supra (90-92 turbo), Tercel (91-99)
6	Cadillac Daewoo Ford GM Jaguar Land Rover Mercedes-Benz Mercury Pontiac Porsche Saab Saturn	Catera (97-01) All (99-01) Contour (95-00), Fiesta (95-), Focus (98-), Fusion (06-) Achieva, Skylark, Grand Am (92-02) All (90-94), X-Type (02-) Discovery (89-04), Range Rover (88-94) W163, W164 Mystique (95-00) Le Mans (88-93) 911 (99-), Boxster (97-) 900 (94-98) L-Series (00-)
7	MINI Saab Jeep Volvo	Cooper S (02-) 900 (78-93), 9000 (86-98) Passenger Vehicles w/threaded neck
8	VW	Beetle, T4, Eurovan (90-03), Golf (93-98), Passat (-96), Vento
9	Audi BMW Porsche VW	A4 (96-), A5, A6 (98-), A8 (97), TT (00) 345 Cayenne Beetle (98-), Golf (99-), Jetta (99-), Passat (98-)
10	BMW	3 Series (98-), 5 Series (97-03), 7 Series (98-) E32, E34, E36, E38, E39, E46, E90
11	Audi VW	All (75-93 w/male thread on expansion tank) All (75-93 w/male thread on expansion tank), Golf (83-92)
12	Ford International Land Rover Opel	Mondeo
13	Chrysler Mercedes-Benz	Crossfire (04-) W124, W140, W210, W211, W215, W216, W220, W221, R230: (w/threaded filler neck on expansion tank)