

[Billet + Spherical Dogbone Mount, 8S Audi TT RS & 8V Audi RS3](#)



034Motorsport's Billet + Spherical Dogbone Mount for 8S Audi TT RS & 8V Audi RS3 is the new standard in performance and durability. This dogbone mount was engineered with performance in mind, manufactured from billet aluminum and stainless steel, and features a genuine Aurora Spherical Bearing to maintain proper articulation and reduce NVH transfer.

Installation Spiciness Rating



(Mild)

Installation of your 034Motorsport Billet + Spherical Dogbone Mount is a straightforward process that will take approximately 1 hour to complete.

Supplied Parts:

- 034Motorsport Billet + Spherical MQB Dogbone Mount
- OEM Replacement Bolts (3)

Tools Needed:

- **Sockets** - 16mm 6-Point, 21mm 6-Point
- Torque Wrench, Pry Bar (or Large Screwdriver)

About This Guide

This Install Guide documents the installation process on a 2017 Audi S3. The actual installation process for your vehicle may vary by model, due to factory options, or because of existing aftermarket modifications you have installed.

Getting Started

- Ensure you have all parts and tools required for installation by reading the complete Install Guide.
- Raise your vehicle securely using a lift.

Step 1

Locate the factory dogbone mount securing the engine/transmission to the front subframe.



Step 2

Using a 21mm 6-Point Socket, remove the bolt securing the factory dogbone mount to the front subframe.




Step 3 (Optional)

Using a Flathead screwdriver, remove the dogbone mount insert if one has been installed previously.



Step 4

Using a 16mm 6-Point Socket, remove the two bolts securing the factory dogbone mount to the transmission.

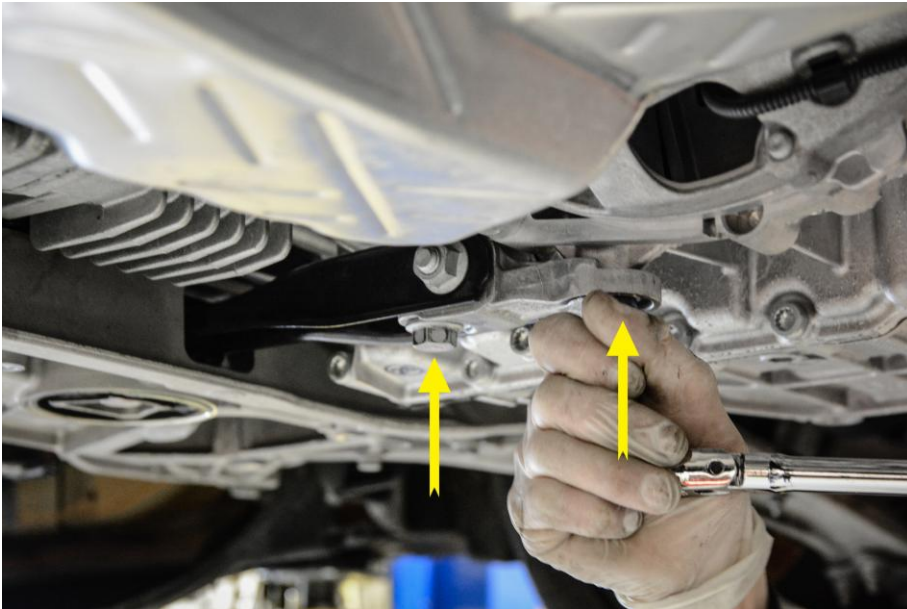

Step 5

Remove the factory dogbone mount from the vehicle by sliding forward and out of the front subframe.



Step 6

Apply a coat of grease to the tail end of the 034Motorsport Billet + Spherical Dogbone Mount to ease installation into the rubber bushing.



Step 7

Insert the tail end of the 034Motorsport Billet + Spherical Dogbone Mount into the front subframe and align front holes with those on the transmission.




Step 8

Loosely install the front two bolts securing the 034Motorsport Billet + Spherical Dogbone Mount to the transmission using the new supplied factory bolts.




Step 9

Reinstall Dogbone Mount Insert if applicable. Use a spare hand to move engine/transmission and align bolt hole in the front subframe with the 034Motorsport Billet + Spherical Dogbone Mount. Loosely install the new factory bolt supplied in the kit.

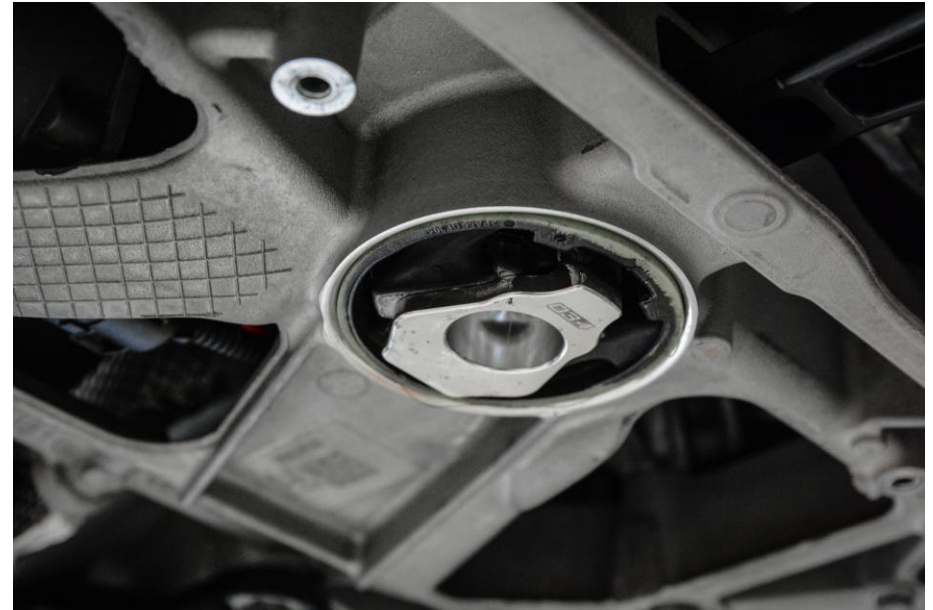

Step 10

Using a 16mm 6-Point Socket, Torque the 2 new factory bolts securing the 034Motorsport Billet + Spherical Dogbone Mount to the engine/transmission to 50 Nm + 90 Degrees.

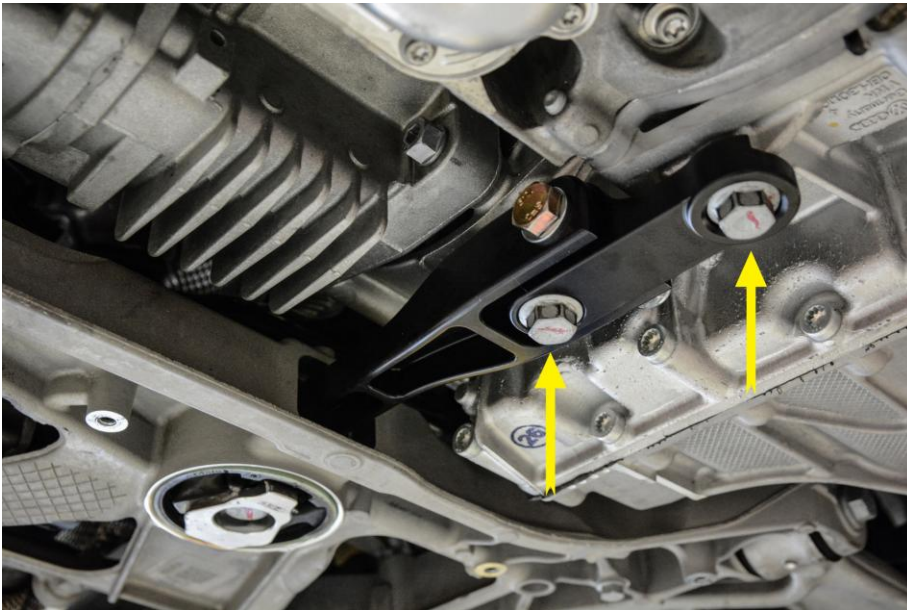

Step 11

Using a 21mm 6-Point Socket, Torque the new factory bolt securing the 034Motorsport Billet + Spherical Dogbone Mount to the front subframe to 130 Nm + 90 Degrees.



Step 12

Ensure all bolts are secure, and lower your vehicle from the lift.

Step 13

Enjoy the Upgrade!