

Qi compatible

Installation instructions Inbay storage

Artikel-Nr.: 241320-50-1

VW Golf V (1K) 2003-2008
VW Golf VI (1K) 2008-2012
VW Jetta V 2005-2010
VW Jetta VI 2010-2014
VW Scirocco (Typ 13) 2008->
VW Eos (1F) 2006-2015



Product overview


- (1) 1 x external voltage transformer including connection cable
With fuse holder and 6.3mm flat connectors
- (2) 2x branching connector 2,5mm² / 2x branching connector 1,5mm²
- (3) Inbay tray
- (4) Mounting accessories
- (5) USB connection cable
- (6) 1 x Felt adhesive tape

All work must only be carried out by experienced personnel. The manufacturer / dealer is not liable for direct or indirect damage caused by a faulty installation. Reserve technical changes.

www.inbay.systems




Install the Inbay storage on the OEM storage unit and rebuild it all previously dismantled parts again.

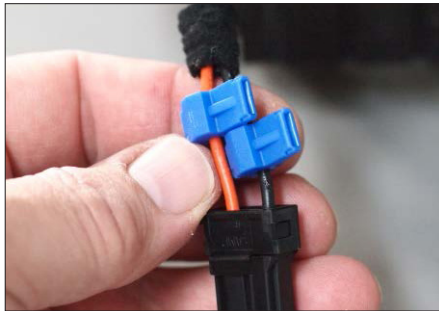

Power supply:
The power connection is via the connection cable of the 12V socket

This connection provides sufficient current for the external voltage transformer and is switched by ACC.

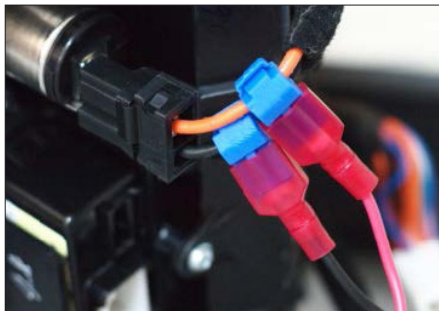

Caution - Before connecting the voltage transformer, check the correct polarity with a voltmeter!

Connection cable of the voltage transformer:
•red: +12V
•Black: ground



Connect the InBay USB connector to the USB socket of the voltage transformer




Install the USB voltage transformer in a suitable place.

Plug the USB connection cable into the external voltage transformer

If necessary, secure the connector with an insulating tape.

Insert the tray unit into the dashboard.

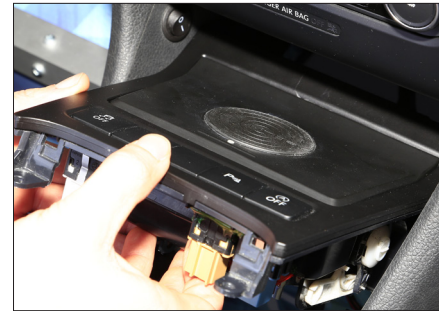

Connect all connectors to the switch strip



Reassemble everything in the reverse order.