


Section 1: Alpha N IAT Relocation Harness Installation

1. Our Alpha N IAT Relocation Harness is a plug and play solution for customers that do not wish to modify their existing engine harness when running a CSL style airbox or Alpha N tune. This harness installs in-line between your factory MAF sensor connector and the new IAT sensor located in the CSL plenum. This will include the following steps:
 - Disconnect the MAF sensor electrical connector.
 - Install the CSL plenum (not included) and the new IAT sensor.
 - Connect the Alpha N IAT Relocation Harness to the factory MAF sensor connector.
 - Route the harness safely around the CSL plenum, securing it with zip-ties as needed.
 - Connect the harness to the new IAT sensor located in the CSL plenum.

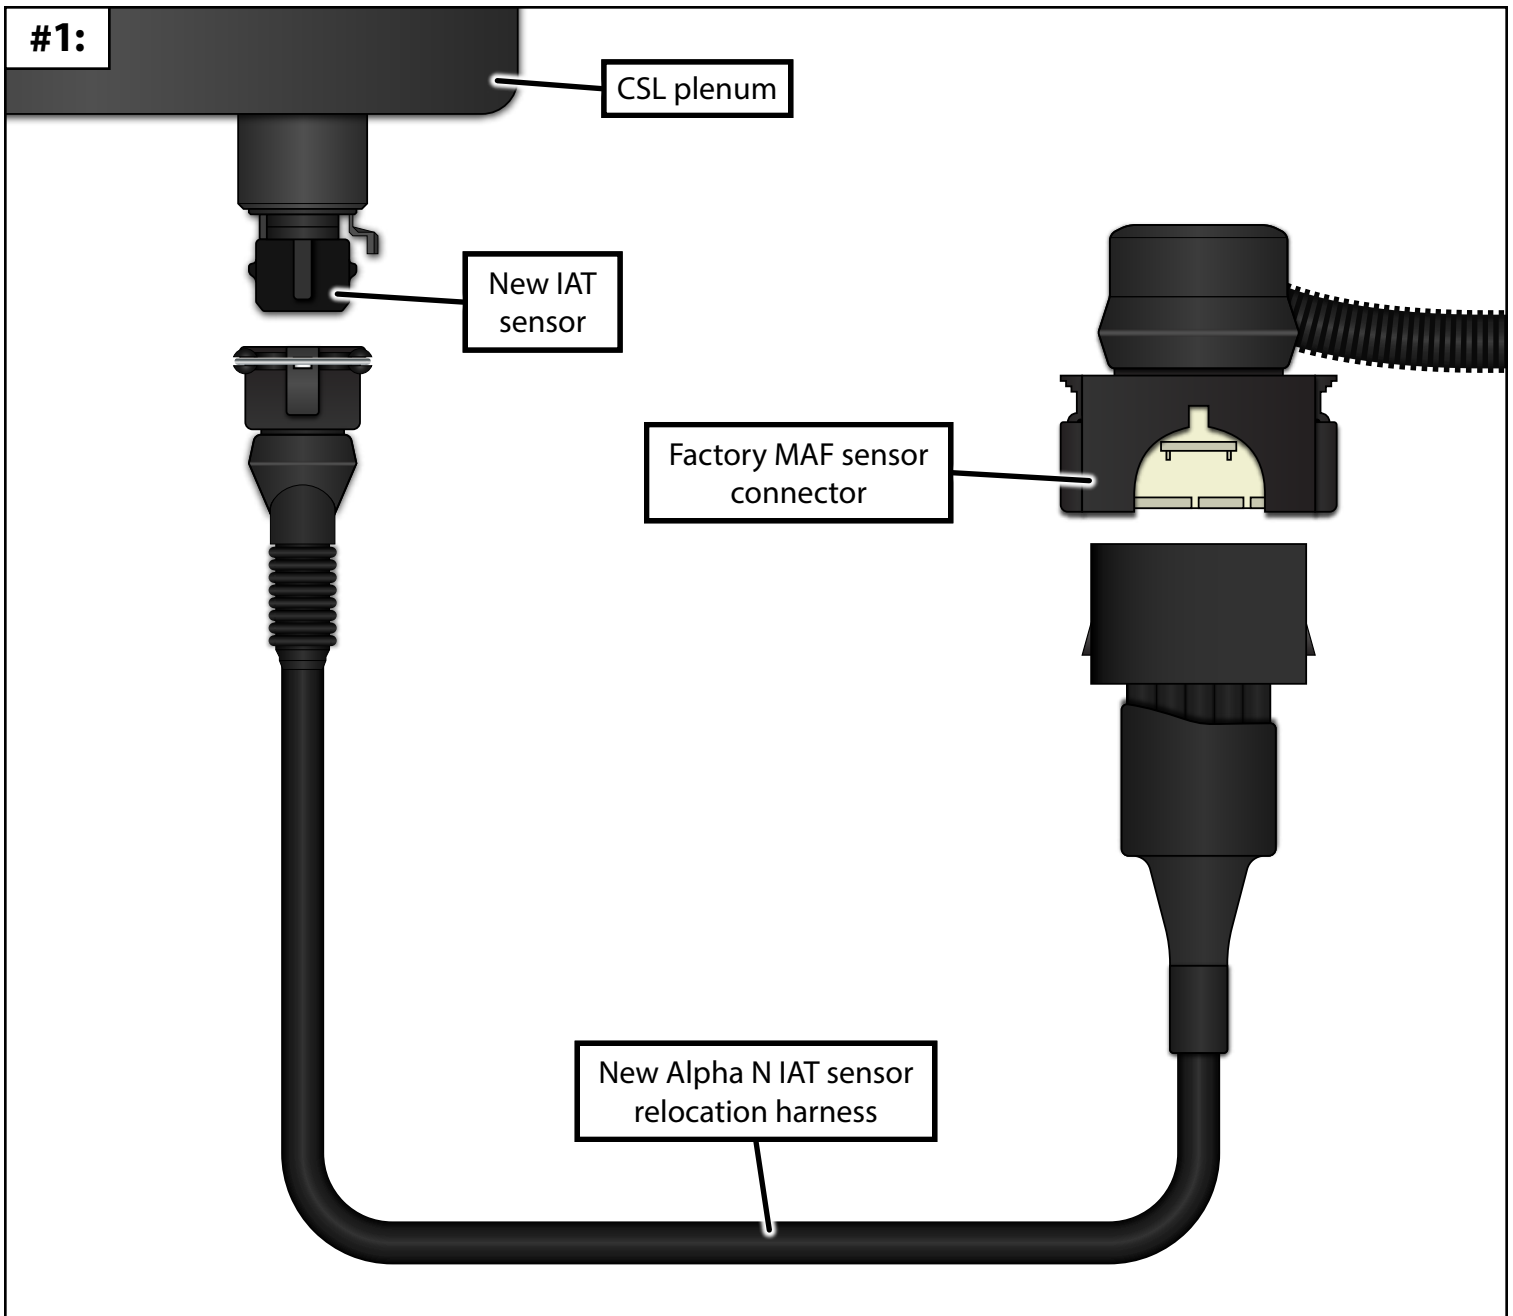

Proper service and repair procedures are vital to the safe, reliable operation of all motor vehicles as well as the personal safety of those performing the repairs. Standard safety procedures and precautions (including use of safety goggles and proper tools and equipment) should be followed at all times to eliminate the possibility of personal injury or improper service which could damage the vehicle or compromise its safety.



Skill Level 1:
Easy