

Required tools: • Heat Gun • Non-Marring Trim Tool

Remove the original:

Each original side blade is held on by five clips and one strip of adhesive tape along the top edge.



Start at either end and carefully use a heat gun to release the adhesive tape and a non marring trim tool to lift the side blade from the body.




Work your way down the side, using heat as required, and pulling the side blade off the body studs as you go.



Remove any remaining adhesive tape from the car and clean the entire rocker panel.

Installing the new carbon fiber side blades:

Each new side blade will be installed using 5 new clips (included) and one strip of adhesive tape that is already installed onto the top edge of the side blade.

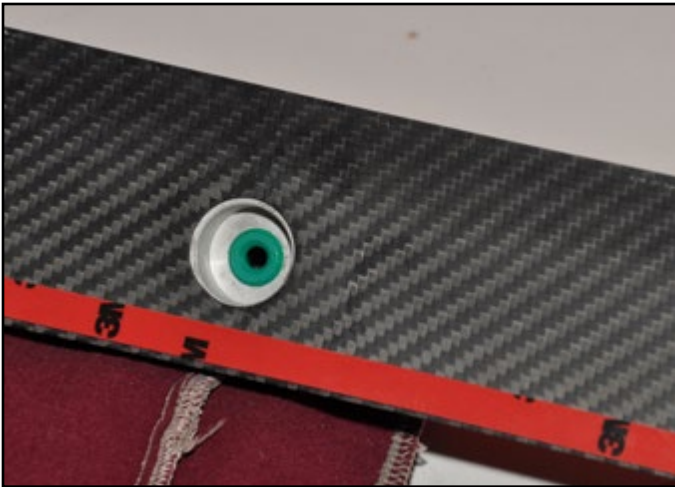

Place the new side blade onto a soft towel so you do not scratch the front side, then push five new clips into the holes in the back.



Using an alcohol pad, wipe the full length of the rocker panel along the top edge to remove any wax or oily residue.

Remember, the **wider** end of the side blade goes at the **rear** of the car.



Pull the protective strip off the adhesive tape, align the new side blade over the five studs on the body and push it into place. Hold pressure for a few seconds along the entire length of the side blade to help the tape to stick.