
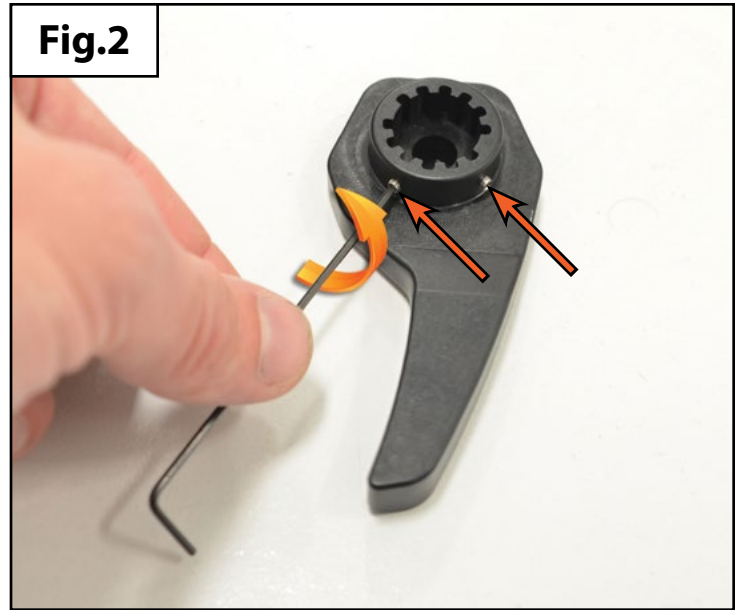


Audi B9 Billet Hood Release Handle Installation Instructions - ES3195650

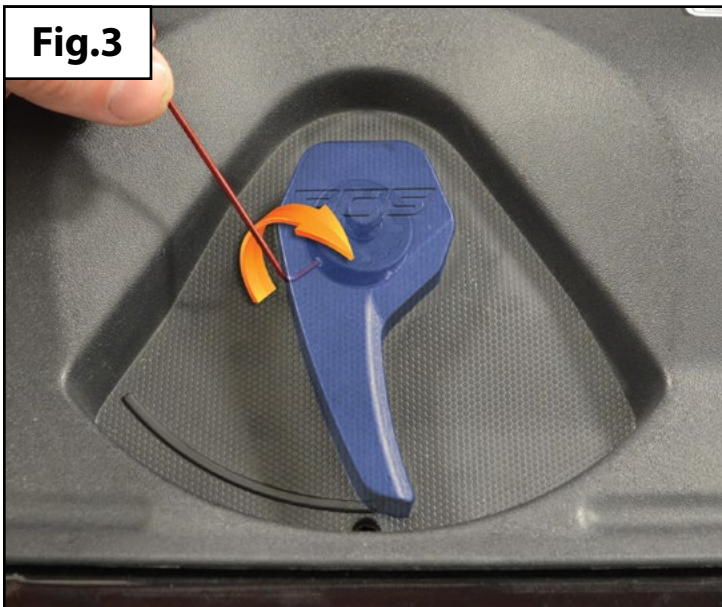

1. Look along the back edge of the OEM hood release handle and you will see a release button. Push in on the button with your finger, then pull the lever off of the post. (**Fig.1**)
2. Use a 1.5mm hex (allen) key to loosen the two set screws in the new billet hood release handle. These set screws need to be backed out enough that the handle will slide over the post, but they don't need to be completely removed. (**Fig.2**)
3. Slide the billet hood release handle onto the post, then use a 1.5mm hex (allen) key to tighten the two set screws.
 - **NOTE:** The release handle and the hex (allen) key have both been highlighted in **Fig.3 & Fig.4** for illustrative purposes.
 - **NOTE:** These set screws do not need to be very tight, they only need to apply pressure to the plastic splines on the post. Over-tightening these set screws can cause damage to the splines on the post.
4. Give the handle a gentle upward tug to ensure that it is secured in place.

Fig.1**Fig.2****Fig.3****Fig.4**

Proper service and repair procedures are vital to the safe, reliable operation of all motor vehicles as well as the personal safety of those performing the repairs. Standard safety procedures and precautions (including use of safety goggles and proper tools and equipment) should be followed at all times to eliminate the possibility of personal injury or improper service which could damage the vehicle or compromise its safety.