



Skill Level 1 - Easy

# BMW F8x M3/M4 Skid Plate Installation Instructions



**Thank you for purchasing your new Turner Motorsport Skid Plate, we appreciate your business!**



### Sleek and durable:

- Our skid plates are constructed of durable 8 gauge 5052 aluminum capable of withstanding multiple impacts without fear of damaging the oil cooler.

### Flawless Finish:

- Our skid plates are available in a raw milled finish or in a gorgeous wrinkle black powercoat finish.



### Easy Installation:

- Installation is quick and easy! Our skid plates retain all factory hardware making installation a breeze.


### Factory Air Duct:

- Our skid plates are designed to retain the factory air duct, helping to maintain cooler oil temperatures.

Proper service and repair procedures are vital to the safe, reliable operation of all motor vehicles as well as the personal safety of those performing the repairs. Standard safety procedures and precautions (including use of safety goggles and proper tools and equipment) should be followed at all times to eliminate the possibility of personal injury or improper service which could damage the vehicle or compromise its safety.

## Section 1: Removing the Stock Belly Pan

- Step #1** • Remove the seven screws (highlighted in **RED**) which secure each plastic belly pan extension on either side of the belly pan.
- Step #2** • Remove the two 13mm bolts (arrows) and the six fasteners (**RED**) which secure the stock belly pan to the underside of the vehicle.

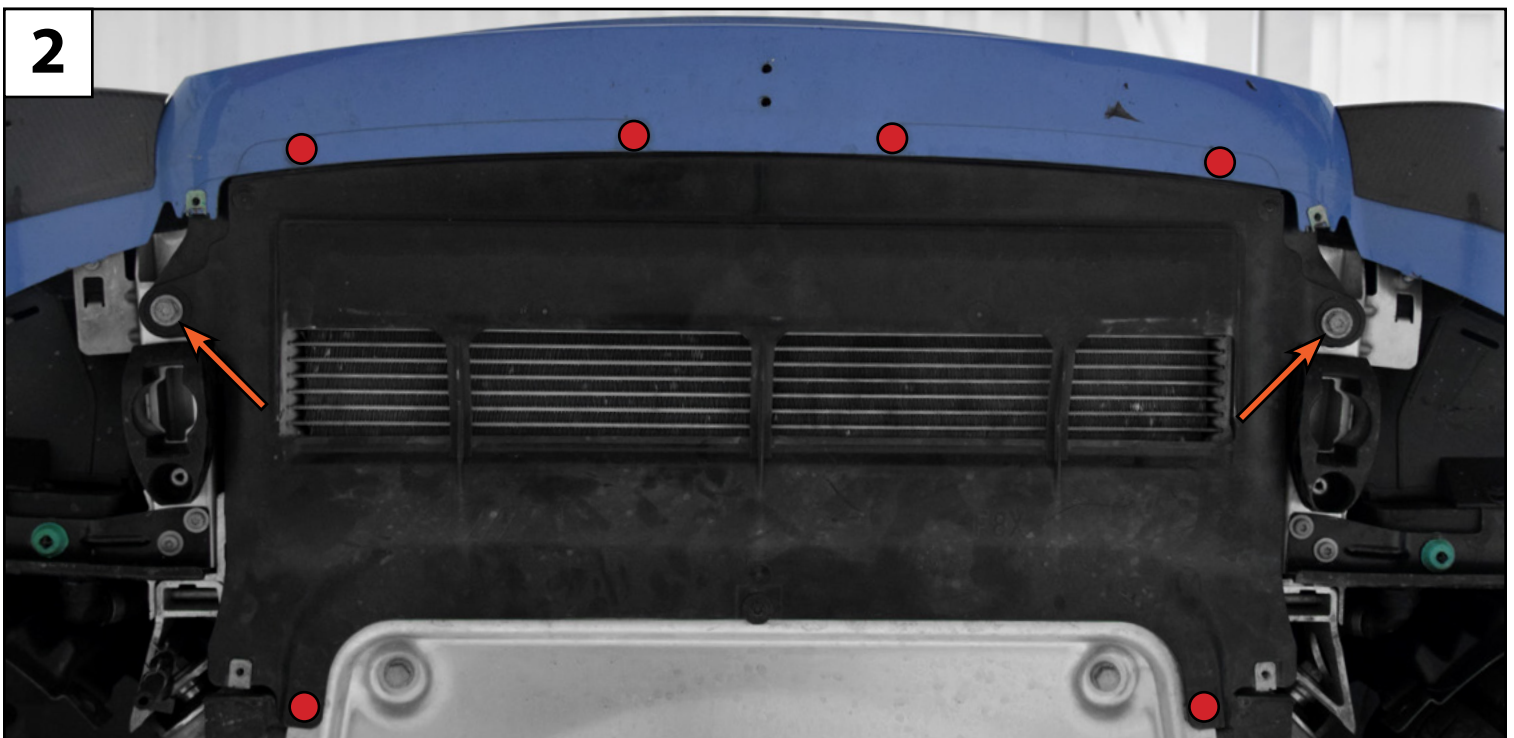

## Section 2: Installing the New Skid Plate

- Step #1** • Lift the new skid plate into place and install the two 13mm bolts (arrows) and the six fasteners (**RED**) to secure it in place.
- Step #2** • Reinstall the two plastic belly pan extension on either side of the new skid plate.

***Congratulations, your installation is complete!***

