
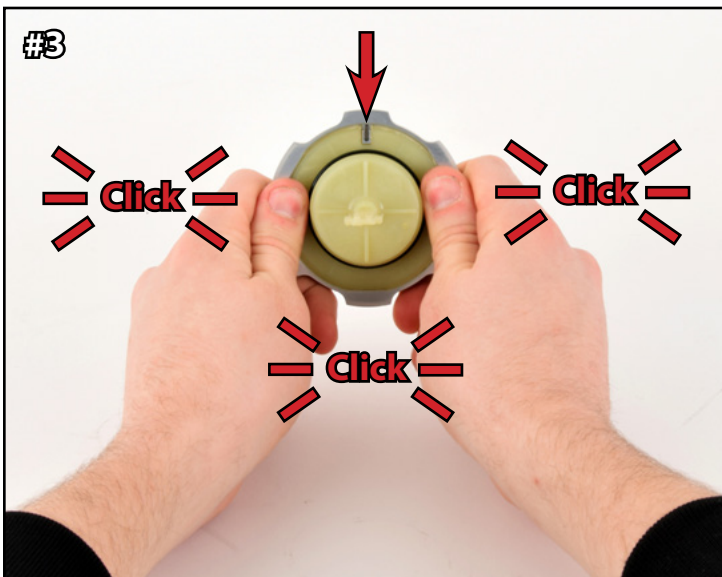


Audi B8 Billet Power Steering Fluid Reservoir Cap Installation Instructions

1. Locate and remove the stock plastic power steering fluid reservoir cap.
2. Using a pick or thin flat-head screwdriver, pry up to remove the dipstick from the bottom of the stock reservoir cap.
3. Align the slit in the dip stick with the tab in the new billet reservoir cap, then apply pressure around the perimeter of the dipstick until all three of the billet notches click into place, retaining the dipstick in the new cap.
4. Reinstall the new billet reservoir cap on the vehicle, so that the steering wheel icon is straight.
5. Be sure and check the power steering fluid level as a final step, and don't forget, we offer a full selection of all your vehicle's fluids and filters at ecstuning.com.

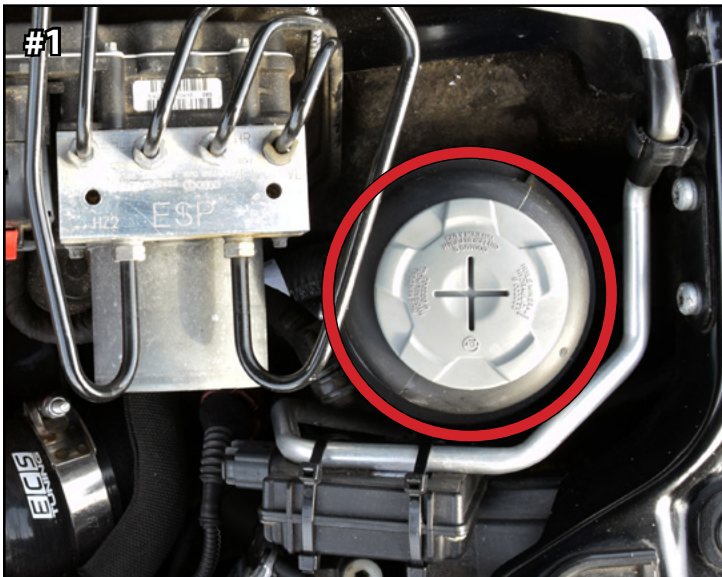

Proper service and repair procedures are vital to the safe, reliable operation of all motor vehicles as well as the personal safety of those performing the repairs. Standard safety procedures and precautions (including use of safety goggles and proper tools and equipment) should be followed at all times to eliminate the possibility of personal injury or improper service which could damage the vehicle or compromise its safety.