


VW MK5/MK6 Golf Rear Chassis Brace

Installation Overview - [ES3557330/ES3557328](#)

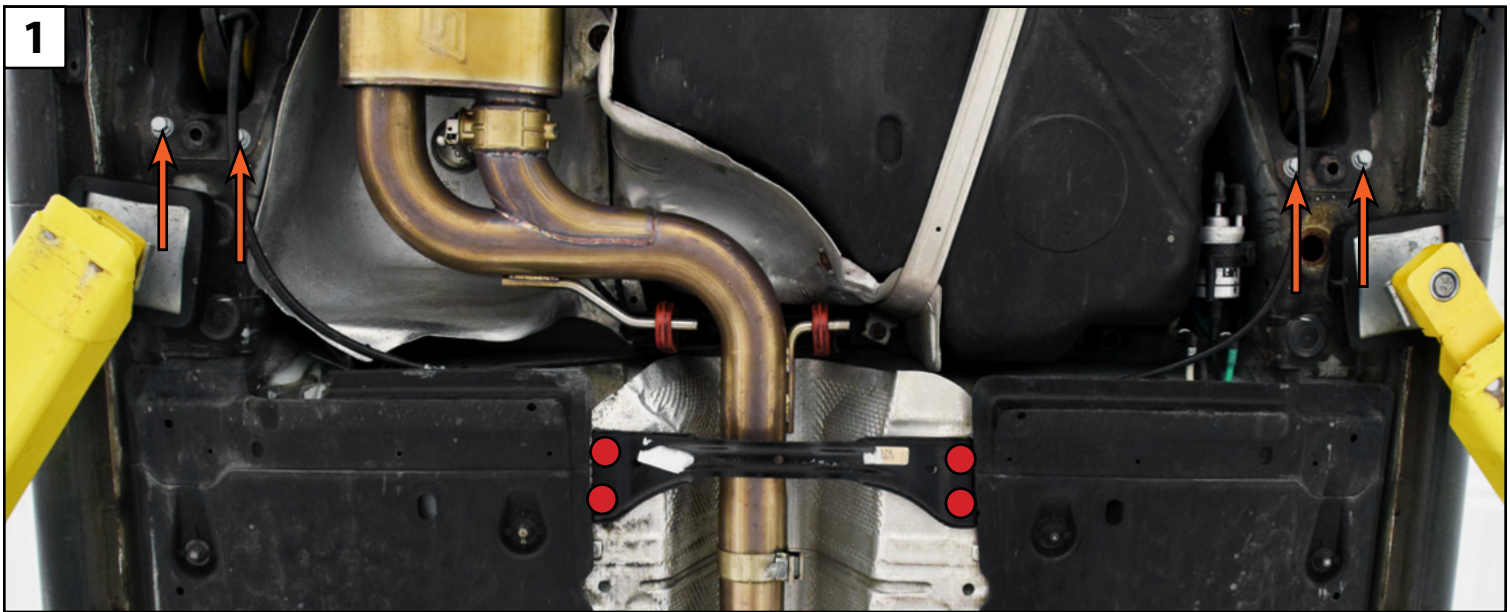

1. Remove the four 13mm nuts (highlighted in **RED**) which secure the rear cross brace (or tunnel shield) to the underside of the vehicle, then remove the four 16mm hex bolts (**arrows**).
2. Pop the parking brake cables out of the wire cable guides as shown.
3. Lift the brace into place, sliding each end of the brace OVER the parking brake cables, then pop the cables back into their clips.



Proper service and repair procedures are vital to the safe, reliable operation of all motor vehicles as well as the personal safety of those performing the repairs. Standard safety procedures and precautions (including use of safety goggles and proper tools and equipment) should be followed at all times to eliminate the possibility of personal injury or improper service which could damage the vehicle or compromise its safety.

4. Install the four provided 16mm hex bolts and torque them to 50 Nm (37 Ft-lbs) + 90°, then install the four provided flanged nuts and torque them to 20 Nm (15 Ft-lbs).

Congratulations, your installation is complete!

