


## VW MK6, MK7, & MK7.5 GTI OE Fit Exhaust Tips Installation Overview - [Click HERE to Shop](#)

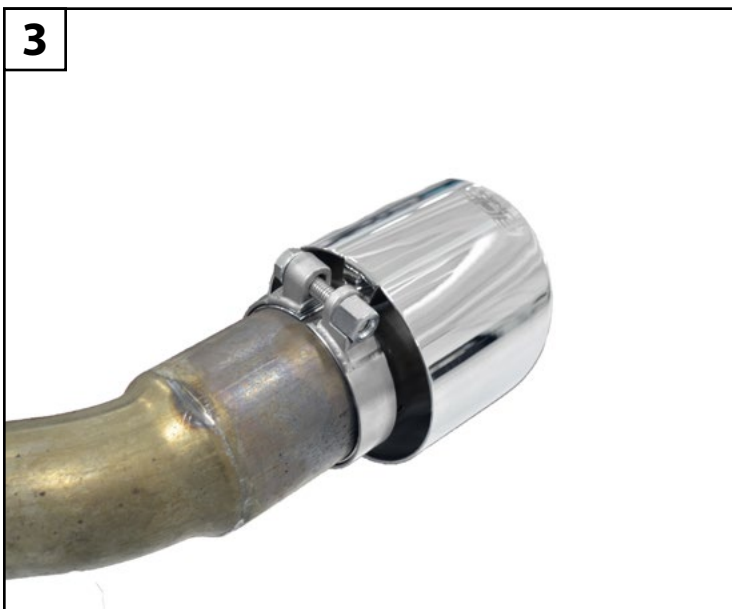

1. Using an angle grinder, carefully grind off the three spot welds which secure each tip to the tail pipe.
2. Slide the tips off of the tail pipes and discard.
3. Slide the new tips onto the tail pipes and adjust the depth until you are satisfied with the orientation. If desired, you can trim some of the excess length off of the tail pipe for a more seamless look.
4. Fine-tune the orientation of the tips until your desired fitment is achieved, then torque the clamps to 25 Nm (18 Ft-lbs).

***Congratulations, your installation is complete!***



Proper service and repair procedures are vital to the safe, reliable operation of all motor vehicles as well as the personal safety of those performing the repairs. Standard safety procedures and precautions (including use of safety goggles and proper tools and equipment) should be followed at all times to eliminate the possibility of personal injury or improper service which could damage the vehicle or compromise its safety.