

Audi B9 Carbon Fiber Radiator Support Cover Installation Instructions - ES3437186





Thank you for purchasing our new ECS Tuning Carbon Fiber Radiator Support Cover, we appreciate your business!








Section 1: Installing the Carbon Fiber Radiator Support Cover

- Step #1
- Look along the back edge of the hood release lever to locate the release button.
- Push in on the button with your finger, then pull the hood release lever off.
- Step #2
- Remove the OEM radiator support cover by pulling up on the front edge to unclip it from the grille, then pull it forward to slide it out of the core support.
- Step #3
- Install the new carbon fiber radiator support cover by sliding the rear edge into the core support, then pushing down along front edge to clip it into the grille.
- Reinstall the hood release lever.



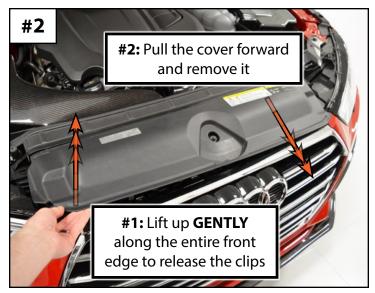



Your Carbon Fiber Radiator Support Cover installation is complete!