



Skill Level 1 - Easy



Audi B8 Gloss Black ABS Front Splitter Installation Instructions - [ES3709340](#)





Thank you for purchasing your vacuum formed ABS component from ECS Tuning, we appreciate your business!



Proper service and repair procedures are vital to the safe, reliable operation of all motor vehicles as well as the personal safety of those performing the repairs. Standard safety procedures and precautions (including use of safety goggles and proper tools and equipment) should be followed at all times to eliminate the possibility of personal injury or improper service which could damage the vehicle or compromise its safety.


Section 1: Installing the ABS Front Splitter

- Step 1** • Remove the three T30 torx screws (circled in **RED**) from the underside of the bumper and set them aside, we will be reusing them later.
- Step 2** • Thoroughly wash and dry the entire mounting surface area on the front bumper. Then, prep the surface by wiping it down with isopropyl alcohol and a microfiber cloth.
- Step 3** • Now we're ready to install the ABS component.
- Start by peeling 1-2 inches of backing off of each strip of double sided tape and folding it over to the side (as shown in photo #3).
 - The goal here is to "dog ear" the backing strip so we can pull it out after the component is correctly laid in place.
- Step 4** • Carefully lay the ABS component into place on the vehicle, ensuring that it is located and aligned properly.
- Reinstall the three T30 fasteners (circled in **YELLOW**) to hold the spoiler in place.

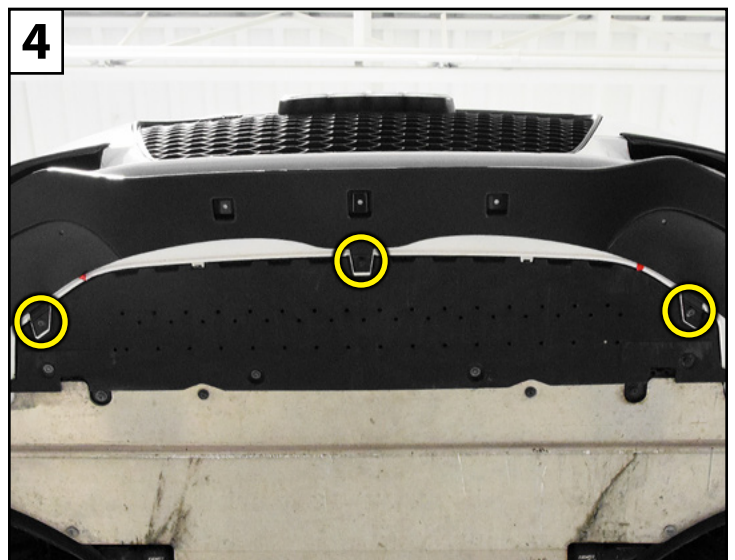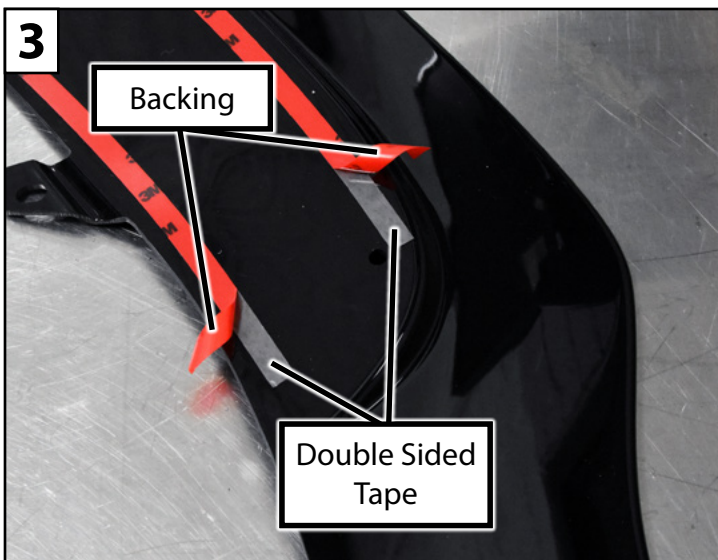

Section 1: Installing the ABS Front Splitter

- Step 5**
- Firmly push upward on the spoiler to hold it in place while slowly pulling the first two backing strips out rearward as shown.
 - Take your time here, a little patience can help you to avoid accidentally tearing the backing strip, or causing the double sided tape to not fully adhere to the vehicle.
- Step 6**
- Repeat the process from step 5 to remove the last two backing strips from the front as shown.
- Step 7**
- Install the 11 provided self-tapping screws (circled in **YELLOW**) through the holes in the spoiler and into the underside of the bumper, being careful not to over-tighten the screws.
- Step 8**
- To help keep your ABS component looking like new, we highly recommend investing in a high-quality trim protectant. A quality trim protectant will help protect the deep glossy finish and prevent scratches and fading, keeping your ABS component looking sharp for years to come.

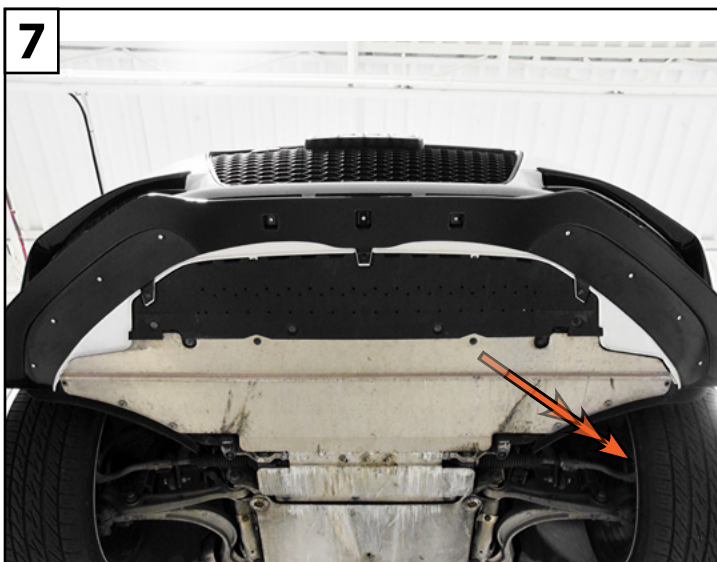

Section 2: Universal ABS Care Information

- Step 1**
- Over time road debris, car washes, and contaminants can cause tiny scratches and swirls to form, detracting from the glossy finish on your new ABS component.
 - If this happens, we highly recommend using an abrasive cutting or polishing compound to smooth out any scratches and restore the glossy finish.
 - Before removing scratches be sure to thoroughly wash and dry the ABS component to remove any contamination.
- Step 2**
- Using the cutting compound of your choice and a clean microfiber cloth, polish away the scratches, then buff off any leftover product leaving behind a consistent and smooth glossy finish.
 - Once any scratches are removed and you are happy with your finish, we highly recommend re-applying a high-quality plastic trim protectant to protect all your hard work.

