



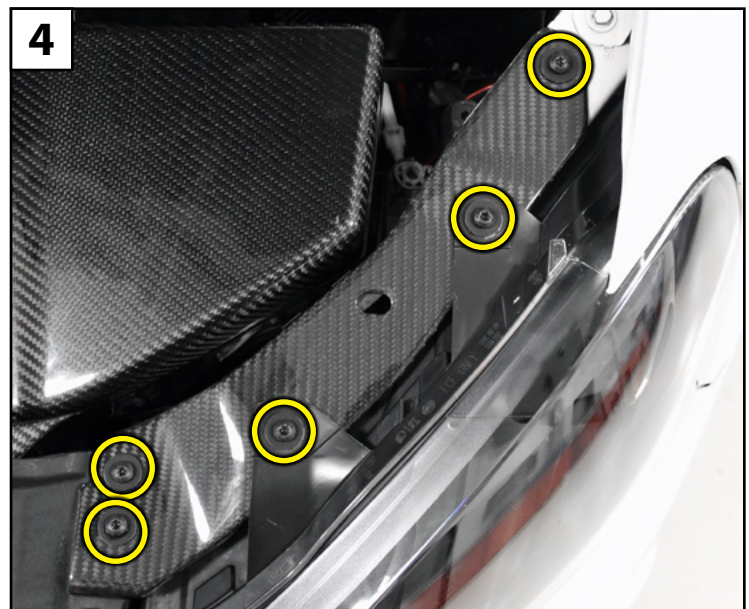

VW MK6 Golf Carbon Fiber Core Support Brace Set Installation Overview - ES3991569

1. Loosen then five T30 bolts (circled in **RED**) which secure the brace on either side and set them aside.
2. Using a small pick or flat head screwdriver *carefully* pry back on the plastic tabs (highlighted in **RED**) for the hood release cable to free it from the brace as shown, then slide the brace out from the vehicle.
3. Slide the new brace into place and ensure the plastic tabs for the hood release cable fully engage the mounting tab on the brace as shown.
4. Reinstall the five bolts (circled in **YELLOW**) to secure each brace back into place and tighten until snug.

Congratulations, your installation is complete!

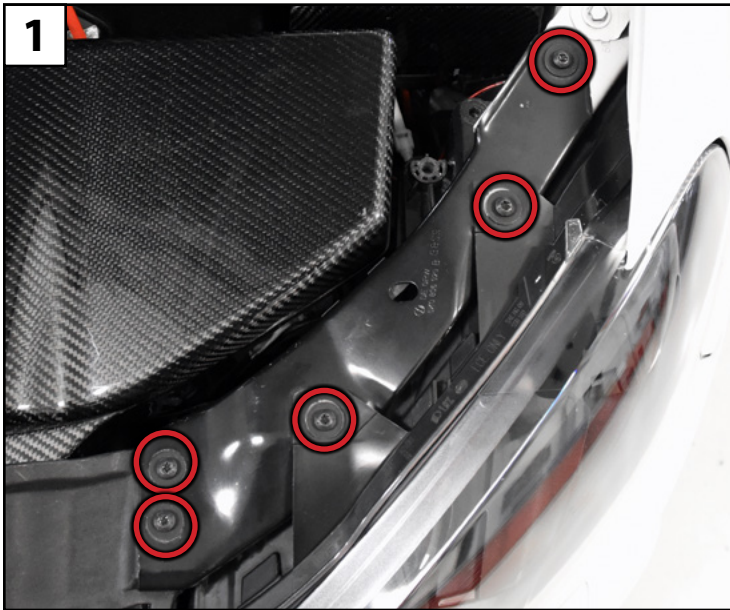

Proper service and repair procedures are vital to the safe, reliable operation of all motor vehicles as well as the personal safety of those performing the repairs. Standard safety procedures and precautions (including use of safety goggles and proper tools and equipment) should be followed at all times to eliminate the possibility of personal injury or improper service which could damage the vehicle or compromise its safety.