




Audi B9 Engine Bay Block Off Plug Set Installation Instructions - ES3667767

1. Please note that our plugs are labeled underneath for LHD vehicles. "DS" stands for "Driver Side", "PS" stands for "Passenger Side" (**Photo #1**).
2. Release the OEM plastic plug from the RH shock tower and swing it upward, then cut it off along the hinges (**YELLOW** dotted lines) for the ultimate clean appearance (**Photo #2**).
 - Use extra care to avoid damaging the paint or nearby components.
3. Push the new PS plug into place, making sure that it is fully seated (**Photo #3**).
4. Release the OEM plastic plug from the LH shock tower and swing it upward, then cut it off along the hinge (**YELLOW** dotted line) for the ultimate clean appearance (**Photo #4**).
 - Use extra care to avoid damaging the paint or nearby components.
5. Push the new DS plug into place, making sure that it is fully seated (**Photo #5**).

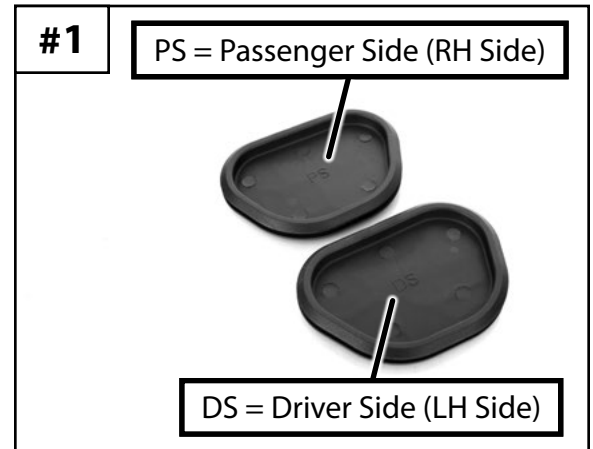

Proper service and repair procedures are vital to the safe, reliable operation of all motor vehicles as well as the personal safety of those performing the repairs. Standard safety procedures and precautions (including use of safety goggles and proper tools and equipment) should be followed at all times to eliminate the possibility of personal injury or improper service which could damage the vehicle or compromise its safety.