



**Skill Level 1:  
Easy**



## TABLE OF CONTENTS

Installation and Safety Information ..... [pg.3](#)  
Removing the Stock Mirrors..... [pg.4](#)  
Installing the Mirror Delete Kit ..... [pg.8](#)

## REQUIRED TOOLS

Note: The tools required for each step will be listed by the step number throughout these instructions.

- Angled Pick
- Non-Marring Trim Removal Tool
  - 10mm Socket
  - T30 Torx Socket
    - Ratchet

## INSTALLATION NOTES

- **RH** refers to the *passenger side* of the vehicle.
- **LH** refers to the *driver side* of the vehicle.
- Always use the proper torque specifications.
- If applicable to this installation, torque specifications will be listed throughout the document and at the end as well.
- Please read all of these instructions and familiarize yourself with the complete process **BEFORE** you begin.

## GENERAL PREPARATION AND SAFETY INFORMATION

EVANNEX cares about your health and safety, please read the following safety information. This information pertains to automotive service in general, and while it may not pertain to every job you do, please remember and share these important safety tips.

- Park your car in a safe, well lit, level area.
- Shut the engine off and remove the key from the ignition switch.
- Make sure any remote start devices are properly disabled.
- **ALWAYS** wear safety glasses.
- Make sure the parking brake is applied until the vehicle is safely lifted and supported.
- Whether lifting a vehicle using an automotive lift or a hydraulic jack, be sure and utilize the factory specified lift points.
- Lifting a vehicle in an incorrect location can cause damage to the suspension/running gear.
- **ALWAYS** support the vehicle with jack stands.
- **ALWAYS** read and follow all safety information and warnings for the equipment you are using.




**NEVER** get underneath a vehicle that is supported only by a jack, and **ALWAYS** make sure that the vehicle is securely supported on jack stands.

## REMOVING THE STOCK MIRRORS

### Step 1: Trim Removal Tool

Carefully pull up on the tweeter to free it from the top of the door panel.

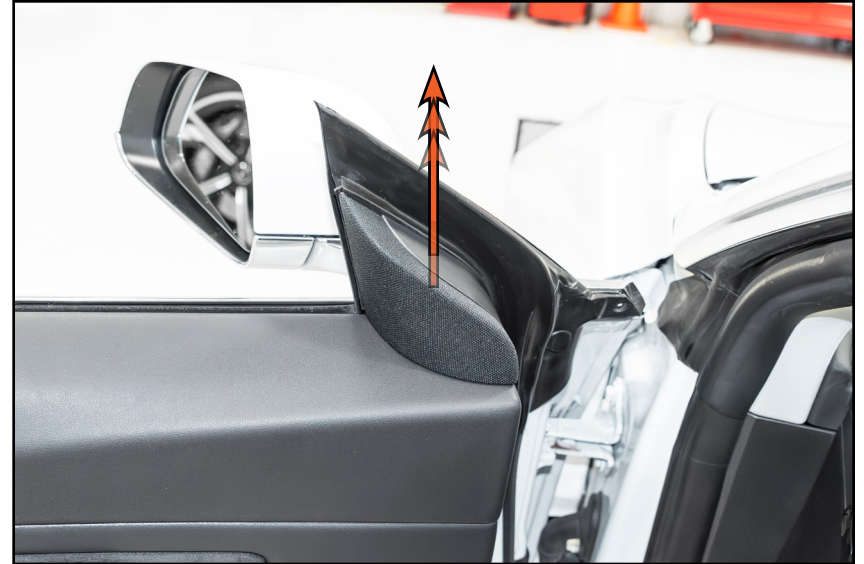

### Step 2: Pick Tool


Disconnect the connector (highlighted in **RED**) and set the tweeter aside.



## REMOVING THE STOCK MIRRORS

### Step 3: T30 Torx Socket & Ratchet

Pop the reflector off the door and the plastic cover off the underside of the interior pull handle, then remove the three door panel mounting screws (arrows in inset photos).

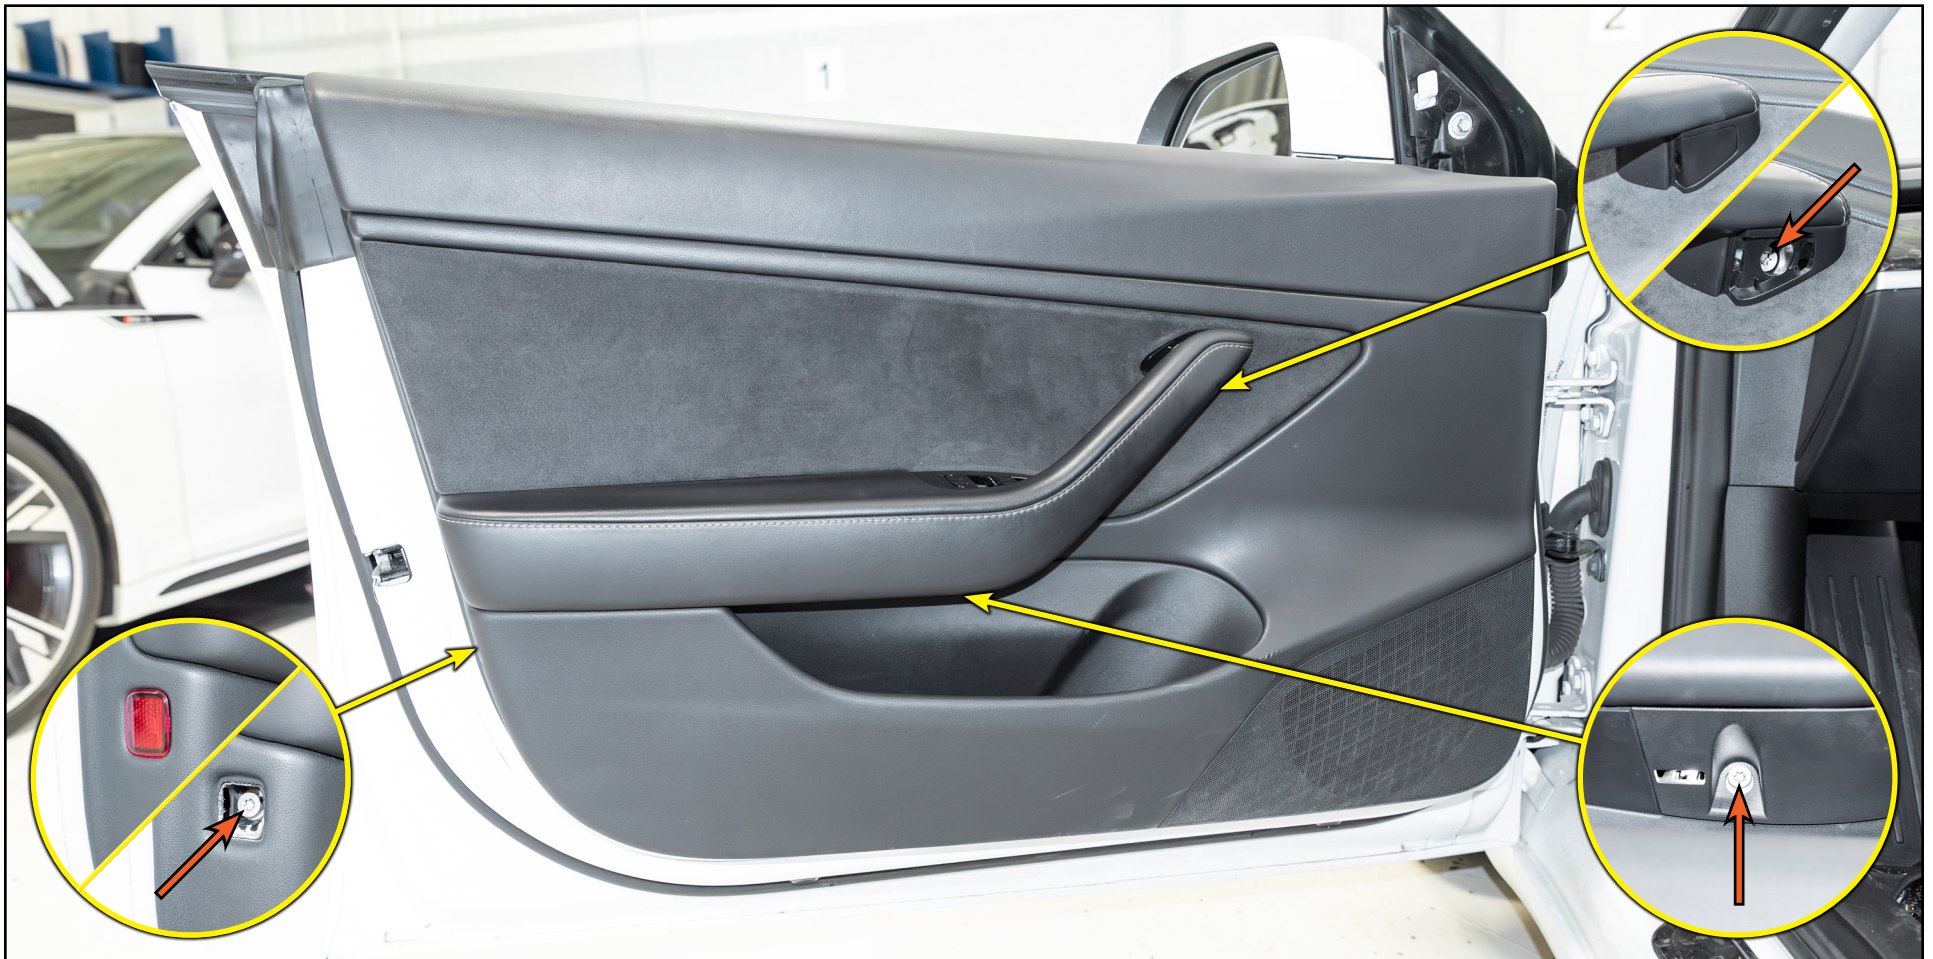

## REMOVING THE STOCK MIRRORS


### Step 4: Trim Removal Tool

Firmly pull back on the perimeter of the door panel to pop the clips free from the door, then lift up to free the door panel from the top of the door. Carefully lay the door panel on its side as shown, being careful not to damage any of the wiring harnesses.



### Step 5: Pick Tool


Carefully disconnect the connectors (highlighted in **RED**) for the mirror, Wi-Fi antenna, and cellular antenna.

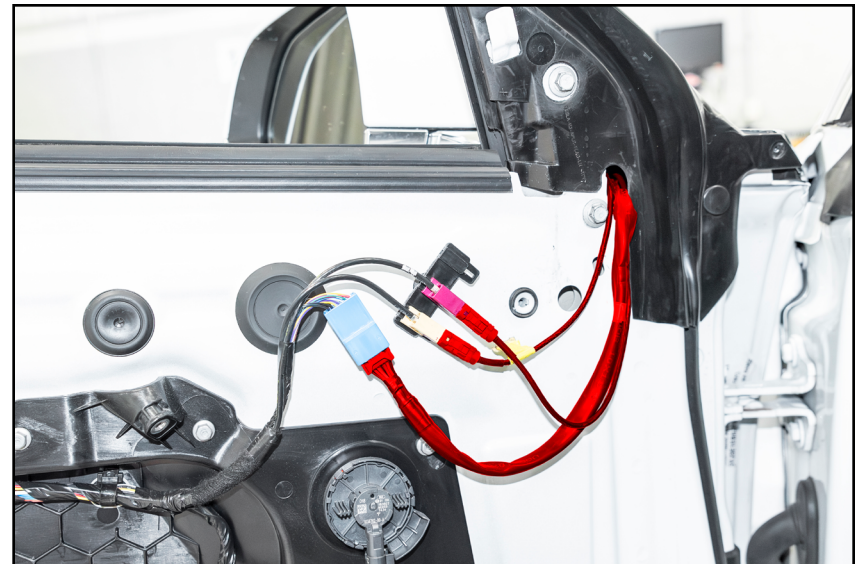

## REMOVING THE STOCK MIRRORS

### Step 6: 10mm Socket & Ratchet

Pop the clips free and lift up the rubber cover as shown, then remove the three bolts (circled in **RED**) which secure the mirror to the door.

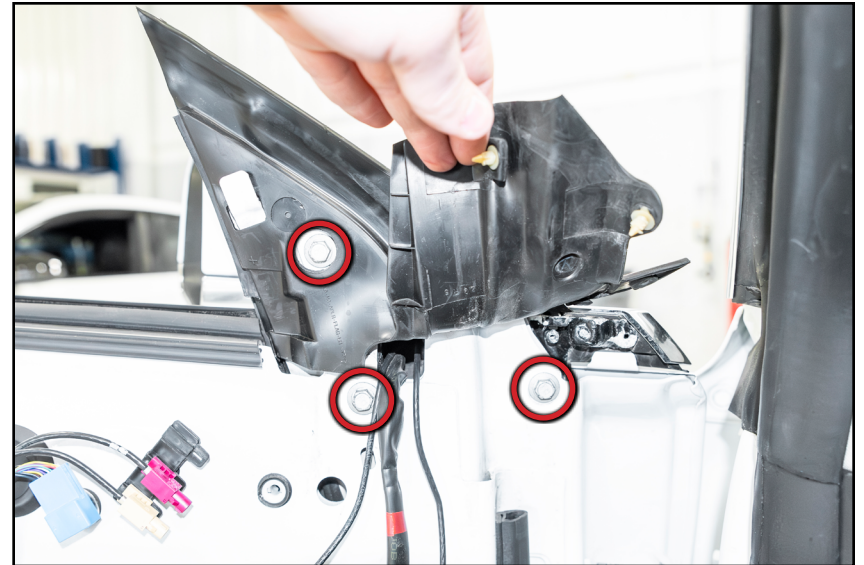

### Step 7:


Lift up to free the mirror from the door, then carefully feed the wiring harnesses through the opening in the door and set the mirror aside.



## INSTALLING THE MIRROR DELETE KIT


### Step 1: Trim Removal Tool

Carefully pull up to remove the plastic trim piece from the top of the mirror.

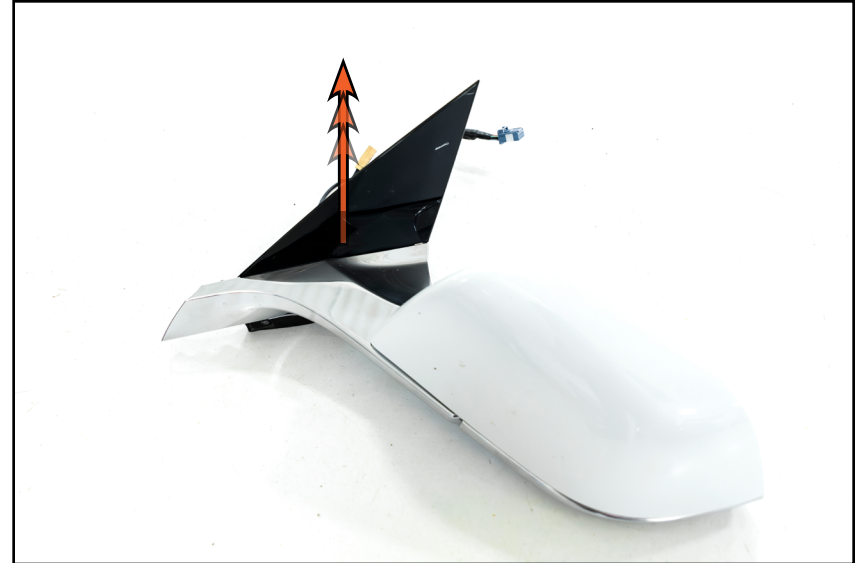

### Step 2: Trim Removal Tool

Carefully pry up to remove the lower trim pieces (arrows) from the bottom of the mirror.

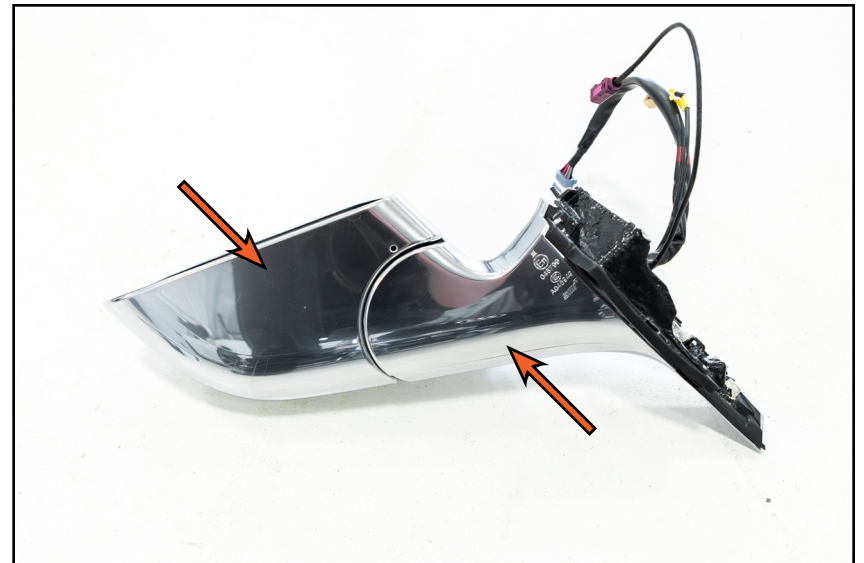




## INSTALLING THE MIRROR DELETE KIT


### Step 3: Trim Removal Tool

Carefully pry up to remove the mirror cap (arrow) from the top of the mirror.

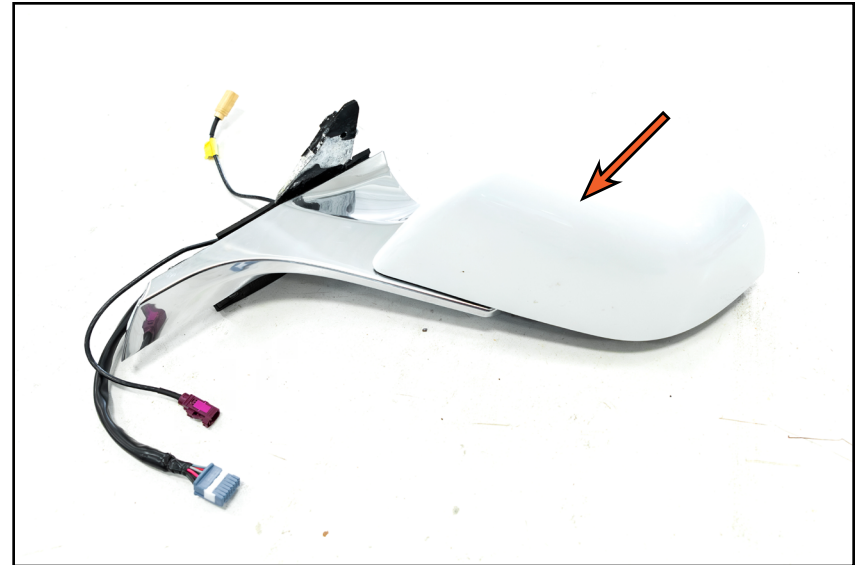

### Step 4:


Carefully guide the Wi-Fi and cellular antenna wiring harnesses (highlighted in **RED**) up through the opening in the center of the mirror as shown.

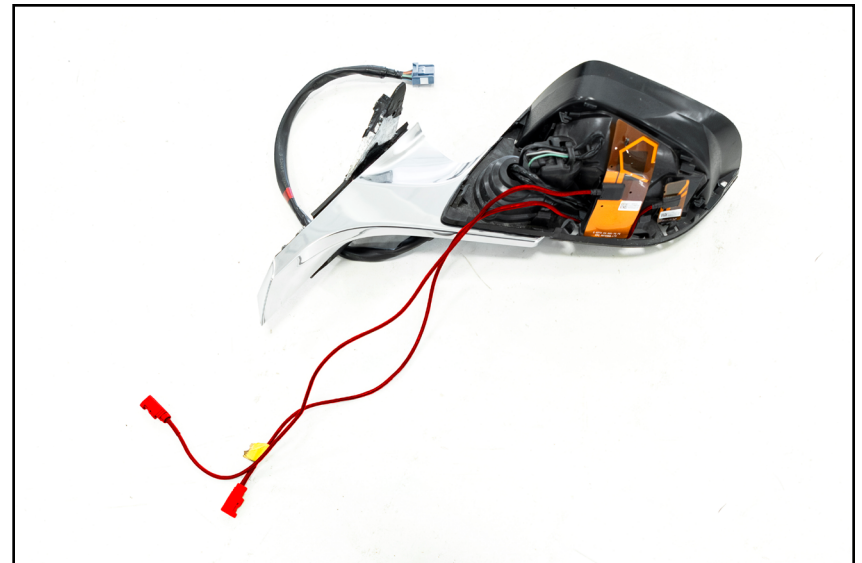

## INSTALLING THE MIRROR DELETE KIT


### Step 5:

Carefully pull the Wi-Fi and cellular antennas (arrows) away from the mirror starting at the bottom and working towards the top until the double-sided tape comes free. Remove the antennas from the mounting posts on the mirror.

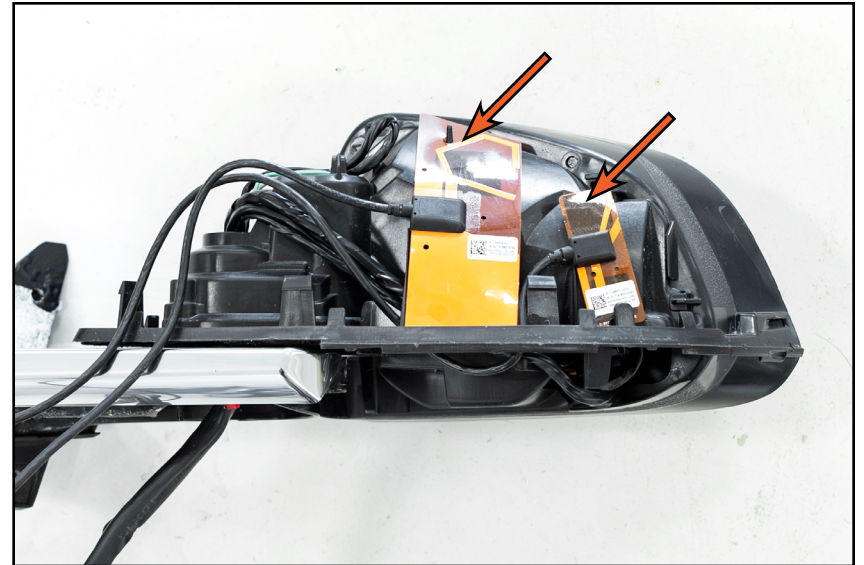

### Step 6:

Prep the mounting surface with rubbing alcohol then apply the provided double-sided tape (arrows) to the antennas in the areas shown.

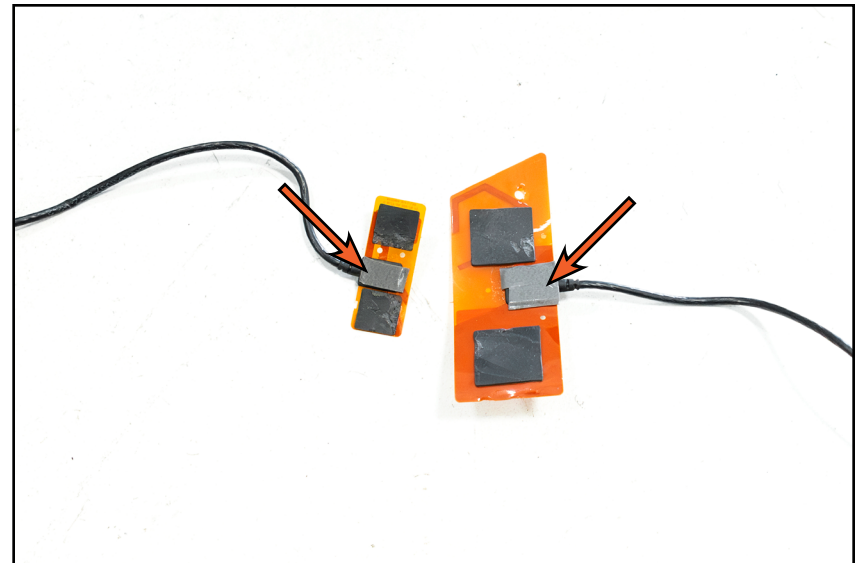

## INSTALLING THE MIRROR DELETE KIT


### Step 7:

Slide the antennas inside the door as shown, then adhere to the newly applied tape (**YELLOW** lines) to the inside of the door. Slide the provided rubber cap (inset photo) onto the mounting tab on the door.



### Step 8: 10mm Socket & Ratchet

Install the provided mounting bracket into the door in the location of the removed mirror and secure it in place using the removed bolts (circled in **YELLOW**). Tighten the bolts until snug.

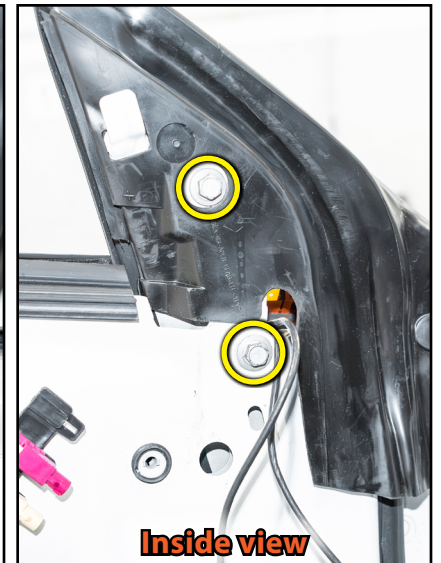

## INSTALLING THE MIRROR DELETE KIT

### Step 9:

Remove the backing from the double-sided tape strips on the inside of the plastic mirror delete covers. Note the location of the mounting hook (arrow).



### Step 10: 4mm Hex (Allen) Socket & Ratchet


Install the mirror delete cover so that the mounting hook slides over the mounting tab on the door, then loosely install the retaining screw (arrow) before adhering the tape to the mounting surface. Tighten the retaining screw until snug.



## INSTALLING THE MIRROR DELETE KIT

### Step 11:

Reconnect the antenna connectors (highlighted in **GREEN**).

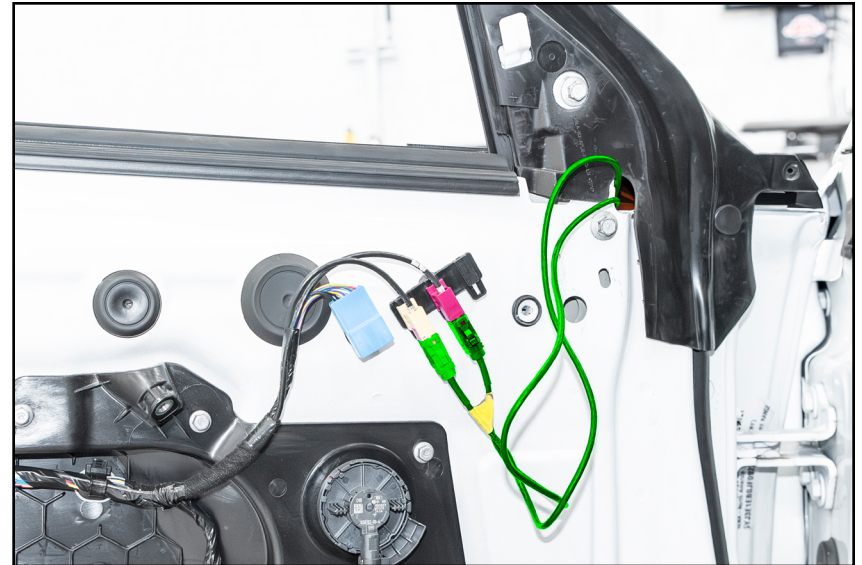


### Step 12: T30 Torx Socket & Ratchet

Reinstall the door panel by lowering the upper mounting tabs on the door panel with the groove in the top of the door, then aligning the mounting clips with the mounting holes and pushing in to pop them into place. Reinstall the door panel screws (arrows) and tighten them until snug. Reinstall the reflector and plastic cover.

***Congratulations, your installation is complete!***



## Your mirror delete kit installation is complete!

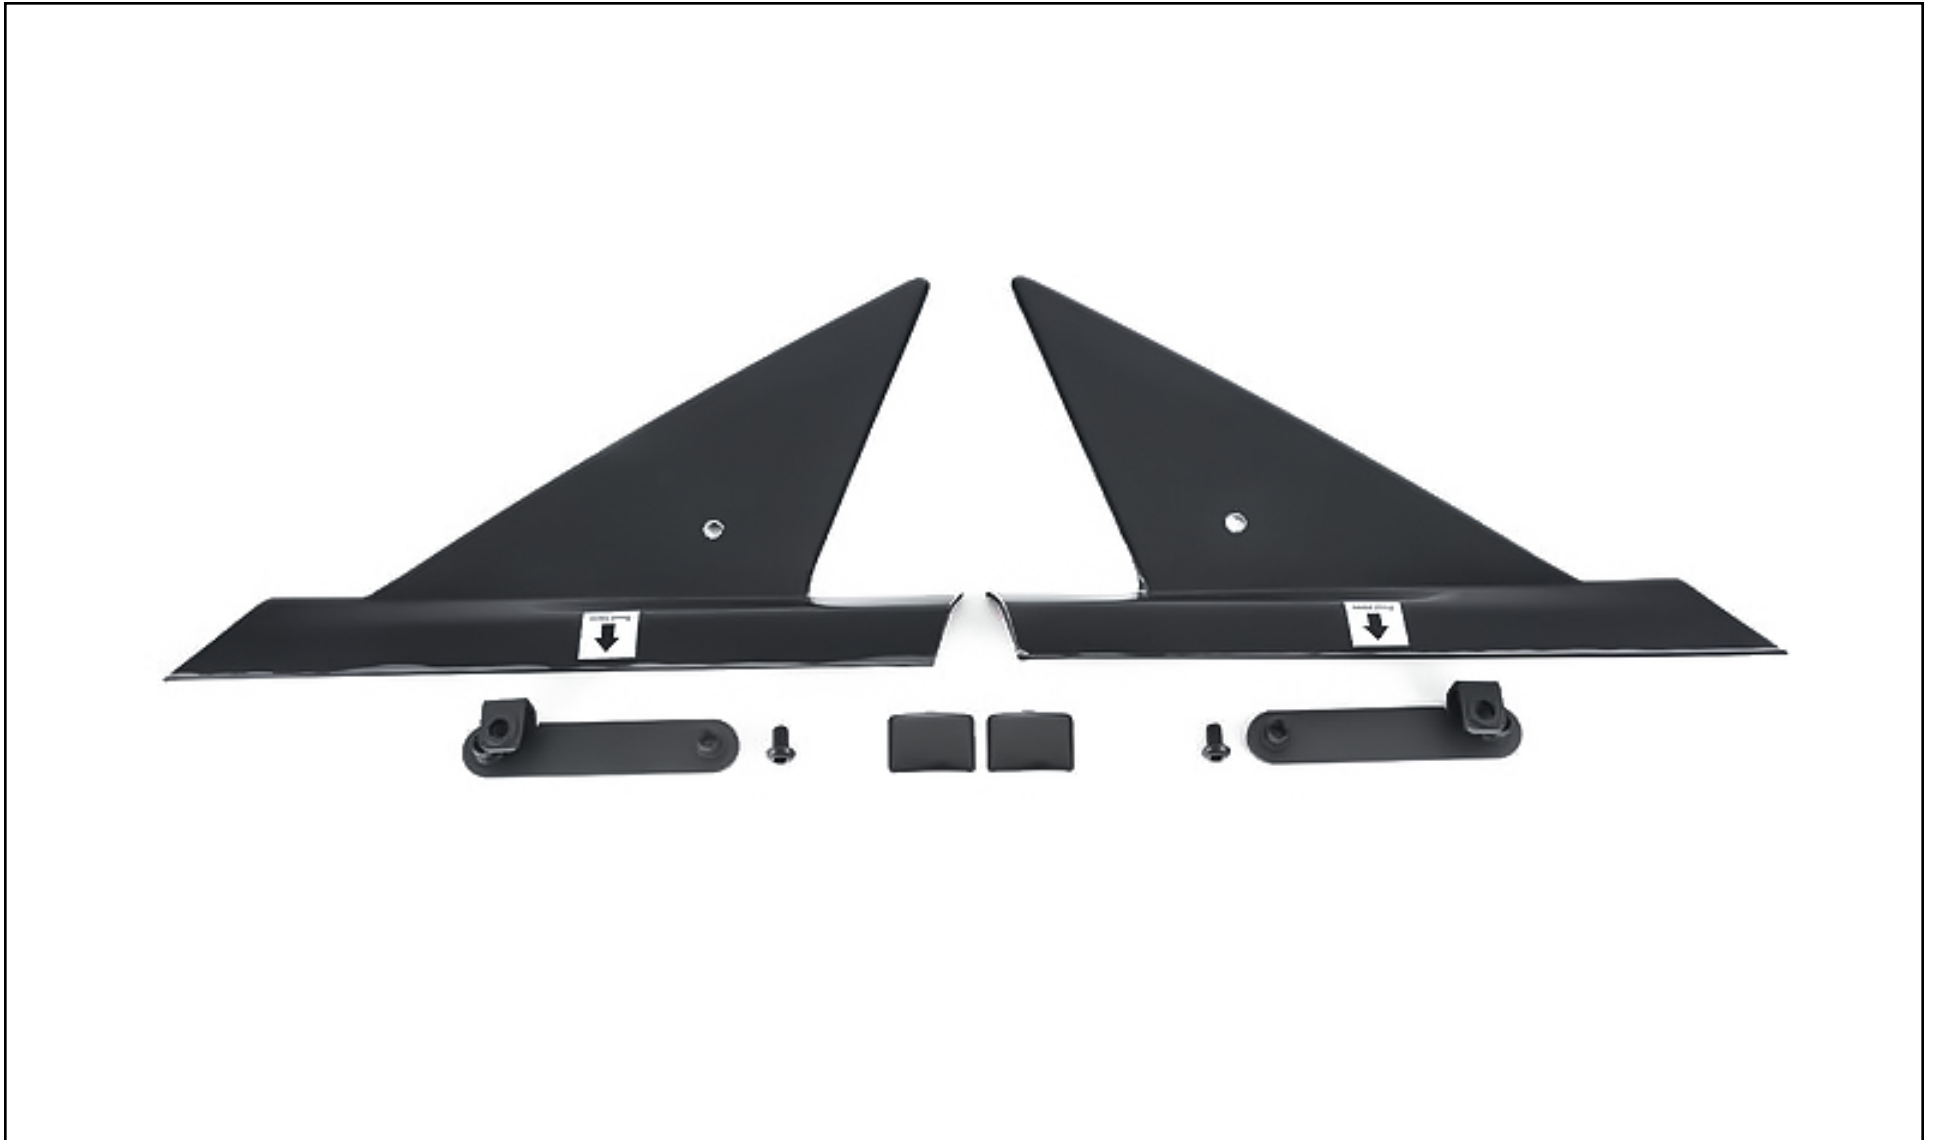

These instructions are provided as a courtesy by: **EVANNEX**

Proper service and repair procedures are vital to the safe, reliable operation of all motor vehicles as well as the personal safety of those performing the repairs. Standard safety procedures and precautions (including use of safety goggles and proper tools and equipment) should be followed at all times to eliminate the possibility of personal injury or improper service which could damage the vehicle or compromise its safety. Although this material has been prepared with the intent to provide reliable information, no warranty (express or implied) is made as to its accuracy or completeness. Neither is any liability assumed for loss or damage resulting from reliance on this material. SPECIFICALLY, NO WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR ANY OTHER WARRANTY IS MADE OR TO BE IMPLIED WITH RESPECT TO THIS MATERIAL. In no event will ECS Tuning, Incorporated or its affiliates be liable for any damages, direct or indirect, consequential or compensatory, arising out of the use of this material.