


Installation Procedures

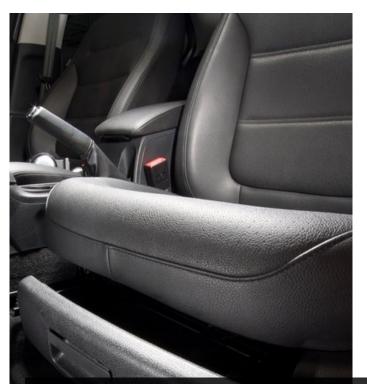

VW MKVI Jetta Seat Tray Installation

This tutorial is provided as a courtesy by ECS Tuning.

Proper service and repair procedures are vital to the safe, reliable operation of all motor vehicles as well as the personal safety of those performing the repairs. Standard safety procedures and precautions (including use of safety goggles and proper tools and equipment) should be followed at all times to eliminate the possibility of personal injury or improper service which could damage the vehicle or compromise its safety.

Although this material has been prepared with the intent to provide reliable information, no warranty (express or implied) is made as to its accuracy or completeness. Neither is any liability assumed for loss or damage resulting from reliance on this material. SPECIFICALLY, NO WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR ANY OTHER WARRANTY IS MADE OR TO BE IMPLIED WITH RESPECT TO THIS MATERIAL. In no event will ECS Tuning, Incorporated or its affiliates be liable for any damages, direct or indirect, consequential or compensatory, arising out of the use of this material.



Kit Contents:

Seat tray mounting frame attachment bolt (2)

Speed nut

Seat Drawer Titanium Black

Seat Drawer Frame

Preparations:

Estimated Installation Time: 1.5 Hour

Tools Required:

3/8 or 1/2 inch-drive ratchet M10 triple square 6 inch extension T-30 Torx Diagonal Cutters Tie wraps

Seat Trays Available:

ES2162452 - Drivers Side Titanium Black ES2162454 - Passenger Side Titanium Black ES2162453 - Drivers Side Corn Silk Beige ES2162455 - Passenger Side Corn Silk Beige



Step 1

Use the seat height adjustment lever to jack up the the passenger front seat as high as it will go.

This makes room to remove the rear seat bolts.

Note: We are installing a passenger-side tray. A driver side tray is also available and installation is similar.

Step 2 Slide the front seat fully forward.





Step 3

Working from the back seat area, remove the two rear seat bolts using a short M10 triple square driver.



page 3



Step 4


Slide the passenger seat fully rearward. Remove the front seat attachment bolts.



Step 5


Tilt the front of the passenger seat upward, being careful not to tug on the seat wires. Disconnecting the wires may turn on a seat belt warning light.

Note: To make shooting photos easier, we will remove the seat from the car. You don't need to remove the seat completely.

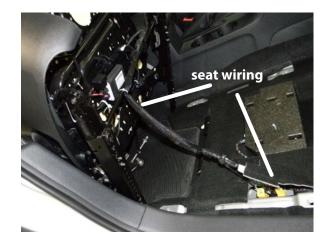

Step 6

The seat tray support bracket attaches to the underside of the seat in four places. There are two plastic hangers that slide into the stamped metal seat bottom at the rear, and two screw attachment holes at the front.

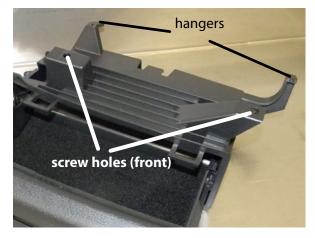






Step 7

This view shows the underside of the passenger seat. Seat tray guide bracket attachment slots and captive nut locations are highlighted. (Our seat had captive nuts already installed. Two are included in the kit, just in case you need them.)

You cannot install the seat tray support until you move the passenger seat sensor module (highlighted with blue halo for emphasis). It is hung from the stamped metal seat bottom with zip ties at the factory. Carefully cut the zip ties and let the module hang free for now. Do not disconnect any wiring.

Timesaver Tip: While installation steps are similar for both front seats, the driver side seat has no seat sensor module.

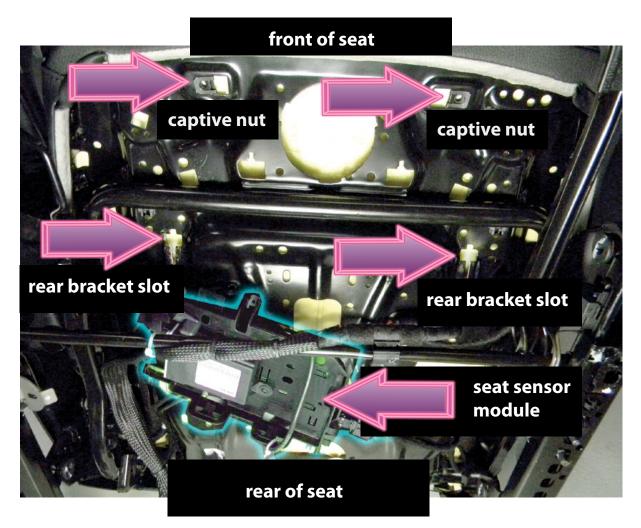







Step 8

Slide the tray guide plastic hangers into the slots in the seat metal. The front hangers will attach to the seat bottom with screws.

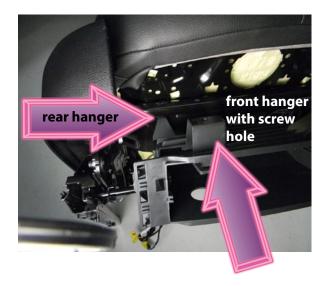

This side view of the seat shows how to insert the hangers into the seat support metal slots and then tilt it upward to a horizontal position.

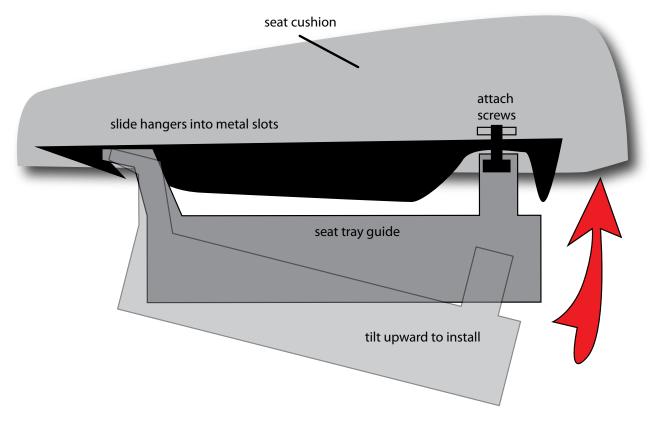






Step 9

The tray guide has two plastic support hooks that hang on the seat side metal support rod, as shown. As you raise the front of the seat guide, you need to pull the support rod to one side to make room for the hooks.

Timesaver Tip: Removing the seat rod attachment bolt from the rod (arrow) temporarily makes it easier to pull the rod aside until the tray guide is fully raised.

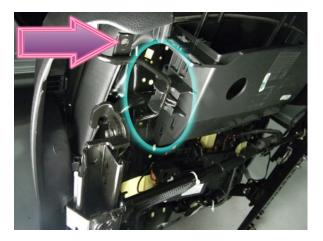

Step 10

Screw the guide to the captive nuts. Replace the metal rod attachment bolt from Step 9, if you removed it.



Step 11

Push the seat side trim slots into the rectangular holes in the seat tray guide.








Step 12

Here is the seat side trim installed in the tray guide.



Step 13

Reattach the seat senor module to the bottom of the seat with new zip ties. Be careful not to stress any wiring or connectors.

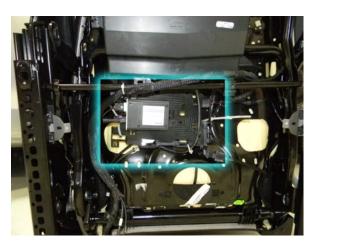

Step 14

Insert the tray into the guide.

Lower the seat and bolt it in place.

Your seat tray is installed and ready to use.

