




P3CARS.COM  
PRECISION • PASSION • PERFORMANCE

Please download the latest copy of this document from [www.p3cars.com/install](http://www.p3cars.com/install)

## Mk5 Vent Gauge Assembly

Refer to the “Car Installation” instructions for removing your vent from the car.

**WARNING** - Do this assembly in a warm area with lots of light, allow parts to warm up to room temperature or the vent plastic will be brittle.

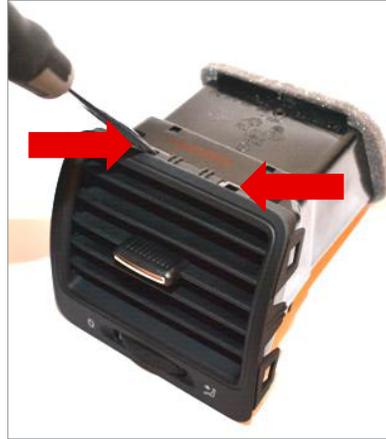

1

Prepare the vent. Using a flathead screwdriver, unclip the vent face starting with the bottom clips. You may need to rotate the open/close dial to gain access to the lower clips. Press down and forward to slide the bottom clips out.



2

Prepare the slats and glass. Carefully remove the 2 bottom slats and set them aside. Then of the remaining 3 slats, swap the bottom and middle of the 3 slats so that the controller is now in the middle as shown. Remove the adhesive backing from the glass back.


### WARRANTY & LIABILITY:

Neither P3 Cars, nor its dealers or agents shall be liable in any way, for any damage, loss, injury or other claims, resulting from the installation or use of this product. By purchasing or installing this product, you assume all liability of any kind connected with the use and/or application of this product. If you are unsure that you can safely install and use this product, consult a qualified installer or mechanic. The warranty on this product covers only the product itself for a period of 6 months from the date of purchase, and it will be at our discretion to repair or replace the affected parts. No user serviceable parts inside. Warranty will be voided if product shows physical damage.



P3CARS.COM  
PRECISION • PASSION • PERFORMANCE

Please download the latest copy of this document from [www.p3cars.com/install](http://www.p3cars.com/install)

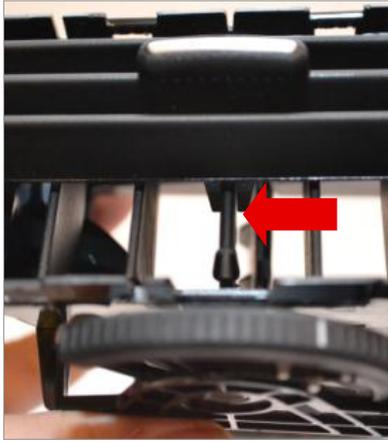

**3** Insert the slats assembly into the vent, lining up the tabs and slat controller, it will fit snugly. Feed the wire through as shown, you may need to kink the wire at a 90 degree angle to keep the wire in place. Line up the glass onto the vent, press to adhere it to the front of the vent frame as shown. After you verify the gauge is fitted as shown, slide on the front of the vent until all 4 clips click into place.

**WARRANTY & LIABILITY:**

Neither P3 Cars, nor its dealers or agents shall be liable in any way, for any damage, loss, injury or other claims, resulting from the installation or use of this product. By purchasing or installing this product, you assume all liability of any kind connected with the use and/or application of this product. If you are unsure that you can safely install and use this product, consult a qualified installer or mechanic. The warranty on this product covers only the product itself for a period of 6 months from the date of purchase, and it will be at our discretion to repair or replace the affected parts. No user serviceable parts inside. Warranty will be voided if product shows physical damage.