



P3CARS.COM
PRECISION • PASSION • PERFORMANCE


Please download the latest copy of this document from www.p3cars.com/install

Audi A3 / TT Vent Install



1

Rotate the ring of the gauge so that it is at the top and the vent is open. Mark the top of the OUTER and the INNER rings so that you can line them up again later.

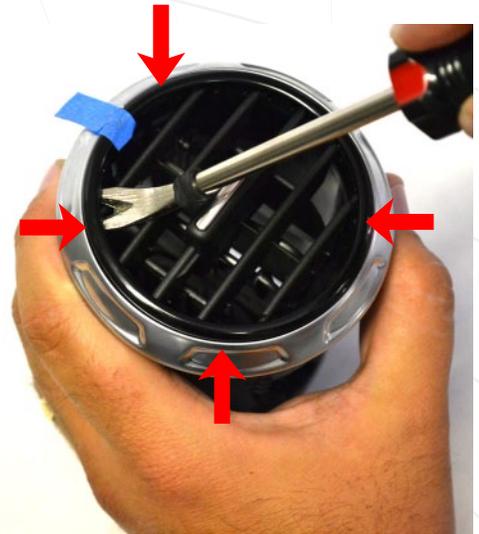

2

Using a trim tool or pry tool, pry the inner trim ring forward releasing the clips at the 4 locations shown.



3

Remove the trim ring. BE SURE TO KEEP THE TOP POSITION MARKED. Set this piece aside for now.



4

Remove the five horizontal vent slats as shown. They just pop out. Keep these in a safe place if you ever wish to return your vent to stock. Leave the vertical slats in place.

WARRANTY & LIABILITY:
Neither P3 Cars, nor its dealers or agents shall be liable in any way, for any damage, loss, injury or other claims, resulting from the installation or use of this product. By purchasing or installing this product, you assume all liability of any kind connected with the use and/or application of this product. If you are unsure that you can safely install and use this product, consult a qualified installer or mechanic. The warranty on this product covers only the product itself for a period of 6 months from the date of purchase, and it will be at our discretion to repair or replace the affected parts. No user serviceable parts inside. Warranty will be voided if product shows physical damage.



5

Feed the display cable connector and wire through the far left opening between the vertical vent slats. Feed the wire through and line up the gauge into the front of the vent. The top of the gauge has the logo and buttons, be sure the gauge is installed right side up.






P3CARS.COM
PRECISION • PASSION • PERFORMANCE


Please download the latest copy of this document from www.p3cars.com/install

6

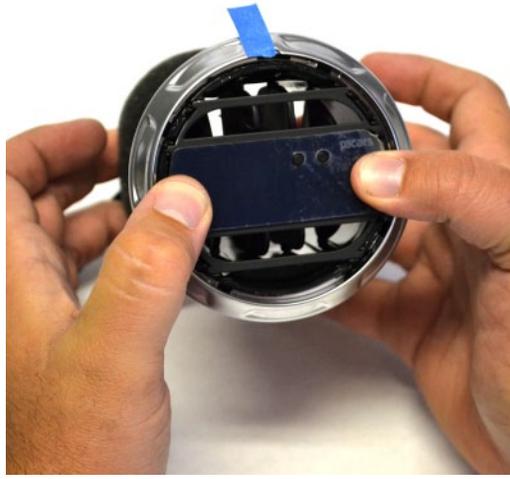

Line up the tabs of the metal display bracket to the vent slat positions. Center the gauge perfectly before applying pressure evenly to the sides of the gauge as shown.

7

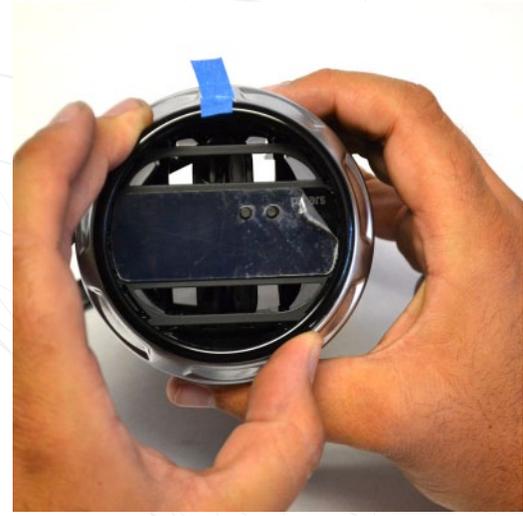

Line up the inner trim ring with the markings that we placed in step 1. Gently insert the ring with no force to get it lined up and seated but not yet clicked into place.

8



Apply pressure to the top clip locations as shown to seat the top clips.

9



Apply pressure to the bottom clip locations as shown to seat the bottom clips. After the clips are seated you can remove any center markings you applied.

WARRANTY & LIABILITY:

Neither P3 Cars, nor its dealers or agents shall be liable in any way, for any damage, loss, injury or other claims, resulting from the installation or use of this product. By purchasing or installing this product, you assume all liability of any kind connected with the use and/or application of this product. If you are unsure that you can safely install and use this product, consult a qualified installer or mechanic. The warranty on this product covers only the product itself for a period of 6 months from the date of purchase, and it will be at our discretion to repair or replace the affected parts. No user serviceable parts inside. Warranty will be voided if product shows physical damage.

10



You're Done!

See the car install video at p3cars.com/install

Please be sure to read the operation and configuration guides. If you have any questions please e-mail support@p3cars.com

Enjoy your new gauge!