




P3CARS.COM
PRECISION • PASSION • PERFORMANCE

Please download the latest copy of this document from www.p3cars.com/install


FOR STANDARD VERSION ONLY - NOT FOR ENHANCED VERSION

Wiring diagrams for different year BMW 335 and harnesses changes.

There have been several different power configurations behind the dash of the BMW 335i. To accommodate all possible configurations, please follow these diagrams according to which features your car has. The new P3 harness allows you to use either of these configurations, or a combination of both depending on how you prefer to run the wires. The important part is that each of the RED/GREEN/BLACK wires go to a single proper location.

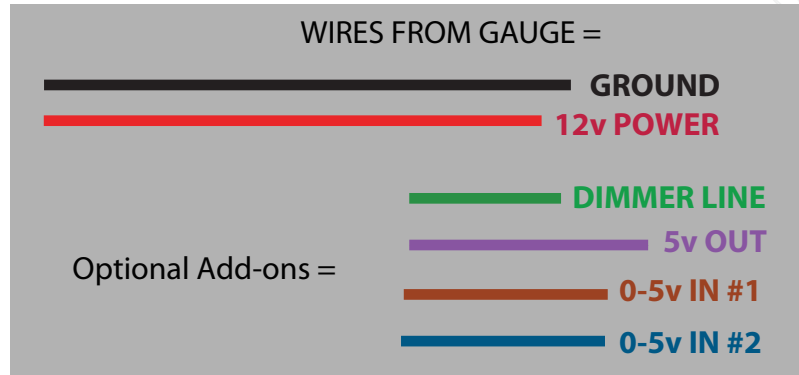

USING INCLUDED T-TAPS (x3)
crimp tap onto wire with pliers

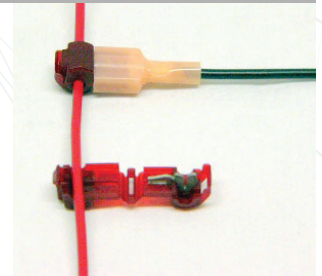

2007 - 2009 cars = POWER/DIMMER/GROUND UNDER ASHTRAY

2009.5+ cars & 135i = POWER/GROUND IN PASSENGER FOOTWELL DIMMER ON TRUNK POP SWITCH. 135 POWER/GROUND UNDER CENTER CONSOLE

335i power location

Remove shift knob (just pull up hard) and pop this panel



135i power location


Pop up this panel for wires




WARRANTY & LIABILITY:

Neither P3 Cars, nor its dealers or agents shall be liable in any way, for any damage, loss, injury or other claims, resulting from the installation or use of this product. By purchasing or installing this product, you assume all liability of any kind connected with the use and/or application of this product. If you are unsure that you can safely install and use this product, consult a qualified installer or mechanic. The warranty on this product covers only the product itself for a period of 6 months from the date of purchase, and it will be at our discretion to repair or replace the affected parts. No user serviceable parts inside. Warranty will be voided if product shows physical damage.

DIMMER LINE ON TRUNK POP SWITCH (all cars)

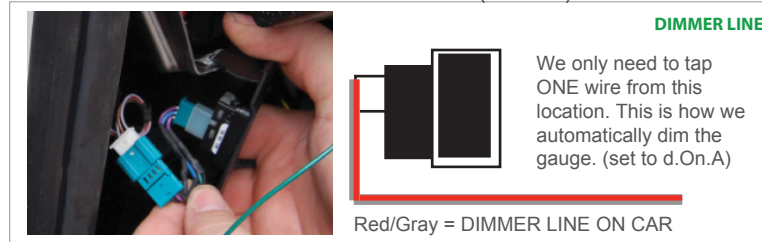

ASHTRAY POWER (2007 - 2009 cars only)

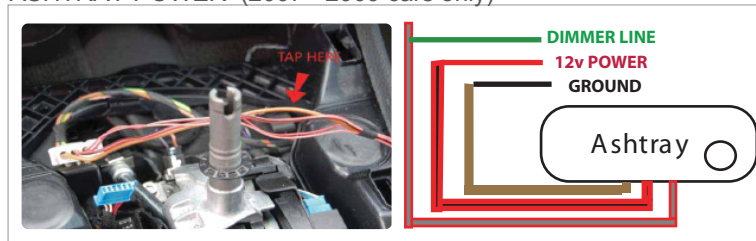

PASSENGER FOOTWELL (2009.5+)

In cars made after March of 2009, you can get POWER and GROUND on the new socket in the upper left corner of the PASSENGER footwell. The back of this socket has a GREEN/YELLOW power wire and a BROWN ground wire. If using this location for power and ground, you must use the trunk pop switch for DIMMER.

