



Installation Procedures

MKV Smoked Mirror Turn Signal Installation Instructions

This tutorial is provided as a courtesy by ECS Tuning.

Proper service and repair procedures are vital to the safe, reliable operation of all motor vehicles as well as the personal safety of those performing the repairs. Standard safety procedures and precautions (including use of safety goggles and proper tools and equipment) should be followed at all times to eliminate the possibility of personal injury or improper service which could damage the vehicle or compromise its safety.

Although this material has been prepared with the intent to provide reliable information, no warranty (express or implied) is made as to its accuracy or completeness. Neither is any liability assumed for loss or damage resulting from reliance on this material. SPECIFICALLY, NO WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR ANY OTHER WARRANTY IS MADE OR TO BE IMPLIED WITH RESPECT TO THIS MATERIAL. In no event will ECS Tuning, Incorporated or its affiliates be liable for any damages, direct or indirect, consequential or compensatory, arising out of the use of this material.



MKV Smoked Mirror Turn Signal Installation Instructions

Safety first:

When performing any work on your vehicle it is important that you make safety your main concern.

Before you undertake this installation, it is important that you read the instructions; and that you also have the necessary tools and skills required to complete the job. If the installation of this product seems overwhelming, please contact a qualified installer in your area.

Tools Required:

Flat Head Screw Driver
T10 Torx Driver

Installation Note:

Extra Care must be taken to avoid cracking the mirrors when removing/installing them. Work carefully and slowly to avoid damaging them.

Preparation:

Park automobile on a level, suitable working area.
Be sure to put the vehicle in park and/or engage the parking brake.
Allow the engine time to cool to ambient temperatures to avoid the possibility of burns.

MKV Smoked Mirror Turn Signal Installation Instructions



Swing the mirror assembly so the mirror is facing outward.




Push on the bottom of the mirror, to gain as much of a gap as possible at the top.

MKV Smoked Mirror Turn Signal Installation Instructions




Gently work the top of the mirror out of the housing and work it loose. Pull the spade terminals off the back of the mirror and set it aside.

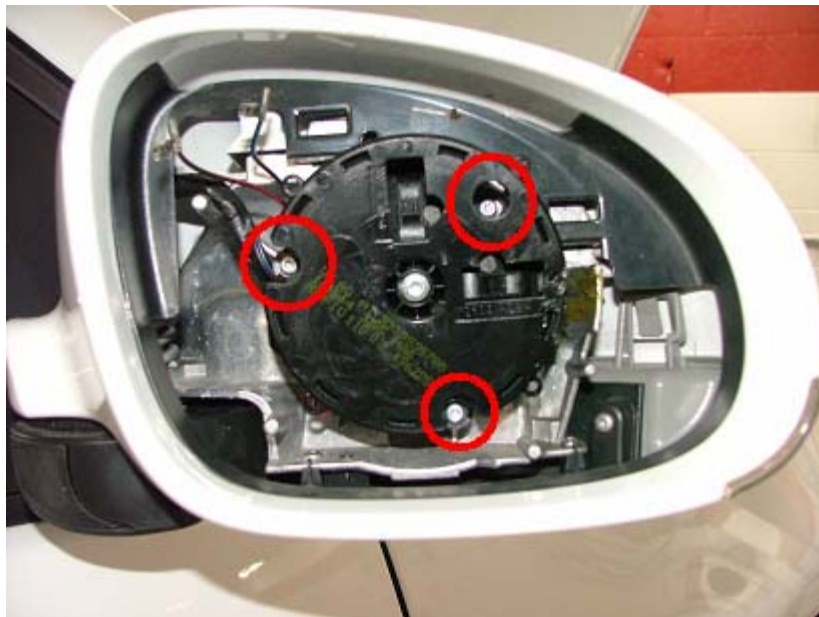

Remove the (3) T-10 Torx Fasteners from the mirror actuator unit. Unclip the actuator and set it aside.

MKV Smoked Mirror Turn Signal Installation Instructions

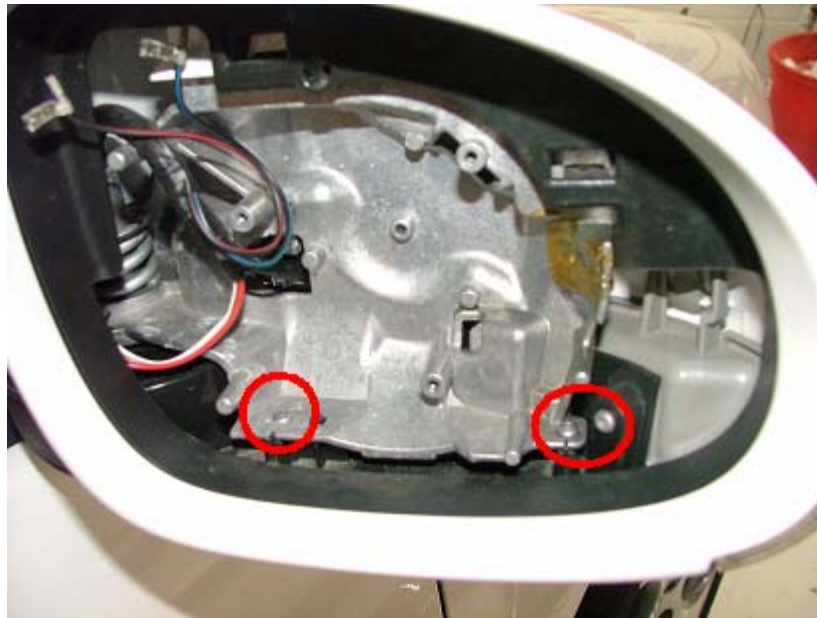

Remove the (3) circled T10 Torx Fasteners.

MKV Smoked Mirror Turn Signal Installation Instructions



Carefully remove the housing cover.

MKV Smoked Mirror Turn Signal Installation Instructions



Remove the last T10 Torx, and remove the oem blinker assembly.

Installation is the reverse of removal.