



Installation Procedures

MKV Dog Bone Insert Installation Instructions

This tutorial is provided as a courtesy by ECS Tuning.

Proper service and repair procedures are vital to the safe, reliable operation of all motor vehicles as well as the personal safety of those performing the repairs. Standard safety procedures and precautions (including use of safety goggles and proper tools and equipment) should be followed at all times to eliminate the possibility of personal injury or improper service which could damage the vehicle or compromise its safety.

Although this material has been prepared with the intent to provide reliable information, no warranty (express or implied) is made as to its accuracy or completeness. Neither is any liability assumed for loss or damage resulting from reliance on this material. SPECIFICALLY, NO WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR ANY OTHER WARRANTY IS MADE OR TO BE IMPLIED WITH RESPECT TO THIS MATERIAL. In no event will ECS Tuning, Incorporated or its affiliates be liable for any damages, direct or indirect, consequential or compensatory, arising out of the use of this material.



MKV Dog Bone Insert Installation Instructions

Safety first:

When performing any work on your vehicle it is important that you make safety your main concern. Properly support the vehicle with jack stands on each side. Never work under a vehicle supported only by a jack.

Before you undertake this installation, it is important that you read the instructions; and that you also have the necessary tools and skills required to complete the job. If the installation of this product seems overwhelming, please contact a qualified installer in your area.

Tools Required:

Torque Wrench
22mm Socket
21mm Socket
Socket wrench
Grease
Jack
Jack Stands

Time : 40 minutes

Installation Note:

When installing the insert, the use of grease or even oil will ensure an easy installation process.

Preparation:

Park automobile on a level, suitable working area.
Be sure to put the vehicle in park and/or engage the parking brake.
Allow the engine time to cool to ambient temperatures to avoid the possibility of burns.

MKV Dog Bone Insert Installation Instructions



Instructions begin assuming the car has been securely lifted, and or set on jack stands.



Locate and remove the bolt indicated in the picture. (21mm)




ECS Tuning
1000 Seville Road, Wadsworth, OH 44281
Phone: 1.800.924.5172 www.ecstuning.com

MKV Dog Bone Insert Installation Instructions




Apply grease to the urethane insert, and proceed to insert it into the mount. It's a tight fit and requires some effort to get it to seat completely.

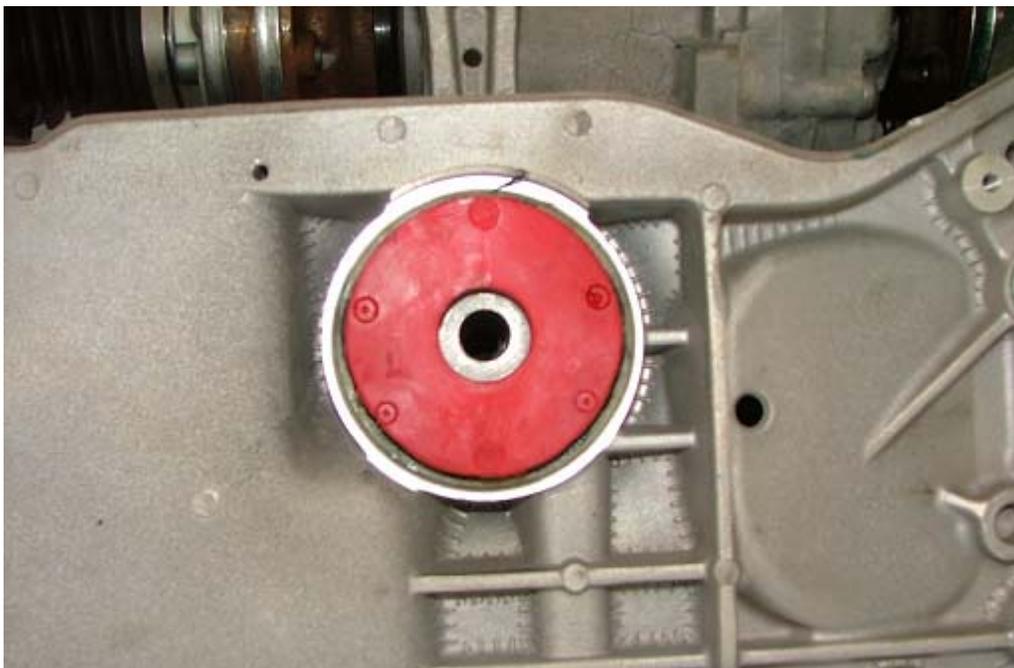

ECS Tuning
1000 Seville Road, Wadsworth, OH 44281
Phone: 1.800.924.5172 www.ecstuning.com

MKV Dog Bone Insert
Installation Instructions

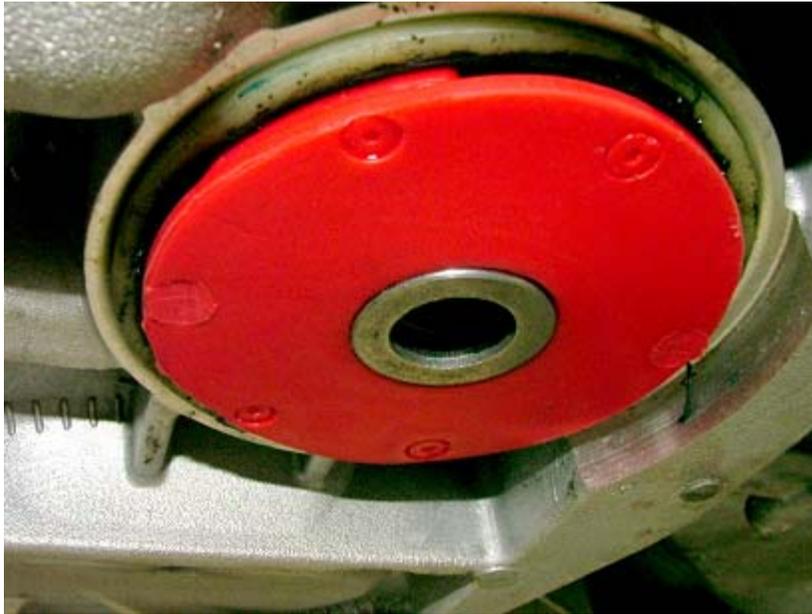

Insert the washer in the center of the insert.

MKV Dog Bone Insert
Installation Instructions



Insert the supplied 22mm bolt through the washers. Tighten to factory spec.

74 FT LBS + 90 deg turn.

This completes the installation of the ECS dog bone mount insert.